

USER MANUAL

ProLite

LCD Monitor

ENGLISH

ProLite T1624MSC

Thank you very much for choosing the iiyama LCD monitor. We recommend that you take a few minutes to read carefully through this brief but comprehensive manual before installing and switching on the monitor. Please keep this manual in a safe place for your future reference.



Dear user, we congratulate you on the purchase of your iiyama LCD.

For details on warranty and locally used pixel policies that apply directly after installation of your product please check the iiyama website.

To report a fault, please contact your local support centre found at www.iiyama.com/service

Things to check before you call the iiyama information line

- | if the power cable is connected securely and turned on?
- | if the display has been turned on?
- | if the signal cable is connected securely and the correct input selected?
- | if the computer has been restarted with the display connected?
- | if the graphics card is correctly installed with the latest drivers possible?
- | if the correct native resolution has been selected via 'Display Properties'?
- | If the R/G/B signal configuration is correct?
- | if the displays On Screen Menu is shown?
- | if the correct brightness and contrast settings have been set?
- | if given display tolerances and compatibility have been considered?
- | if via the On Screen Menu you have performed a Factory Reset/Recall?

Before reporting the screen defect, please prepare the following information/evidence:

- | model number *
- | purchase receipt and serial number *
- | name and address for collection
- | telephone/fax number, for availability during the day
- | convenient collection date (date, time)
- | short description of the defect

Important Note:

If there is no fault found in the collected equipment after inspection, the transferring party shall incur charges for transport and administration.

If you have checked all of the above and there is still no picture, call our information line for assistance in your country.

* see the identification plate on the back of the case.

CE MARKING DECLARATION OF CONFORMITY

This LCD monitor complies with the requirements of the EC/EU Directive 2014/30/EU "EMC Directive", 2014/35/EU "Low Voltage Directive", 2009/125/EC "ErP Directive" and 2011/65/EU "RoHS Directive".

The electro-magnetic susceptibility has been chosen at a level that gives correct operation in residential areas, business and light industrial premises and small-scale enterprises, inside as well as outside of the buildings. All places of operation are characterised by their connection to the public low voltage power supply system.

IYAMA CORPORATION: Wijkmeerstraat 8, 2131 HA Hoofddorp, The Netherlands

Model No. : PLT1624M

 mark:

Equipment protected throughout by Double insulation or Reinforced insulation.



We recommend recycling of used product. Please contact your dealer or iiyama service center. Recycle information is obtained via the Internet, using the address: <http://www.iiyama.com>

You can access the Web page of different countries from there.

- We reserve the right to change specifications without notice.
- All trademarks used in this user manual are the property of their respective owners.
- Eprel registration number T1624MSC-B1 : 1209818

TABLE OF CONTENTS

FOR YOUR SAFETY.....	1
SAFETY PRECAUTIONS.....	1
SPECIAL NOTES ON LCD MONITORS.....	3
CUSTOMER SERVICE.....	3
CLEANING.....	3
BEFORE YOU OPERATE THE MONITOR.....	4
FEATURES.....	4
CHECKING THE CONTENTS OF THE PACKAGE.....	4
SPECIAL NOTES ON TOUCH PANEL.....	5
INSTALLATION.....	5
CONTROLS AND CONNECTORS.....	6
FUNCTIONS OF REMOTE CONTROL.....	7
ECO MODE.....	7
REMOTE CONTROL BATTERY REPLACEMENT.....	8
CONNECTING YOUR MONITOR.....	10
ADJUSTING THE VIEWING ANGLE.....	11
COMPUTER SETTING.....	12
OPERATING THE MONITOR.....	14
ON-SCREEN MENU CONTENTS.....	16
TROUBLE SHOOTING.....	17
RECYCLING INFORMATION.....	17
APPENDIX.....	18
SPECIFICATIONS.....	18
DIMENSIONS.....	19
COMPLIANT TIMING.....	20

FOR YOUR SAFETY

SAFETY PRECAUTIONS

WARNING

STOP OPERATING THE MONITOR WHEN YOU SENSE TROUBLE

If you notice any abnormal phenomena such as smoke, strange sounds or fumes, unplug the monitor and contact your dealer or iiyama service center immediately. Further use may be dangerous and can cause fire or electric shock.

NEVER REMOVE THE CABINET

High voltage circuits are inside the monitor. Removing the cabinet may expose you to the danger of fire or electric shock.

DO NOT PUT ANY OBJECT INTO THE MONITOR

Do not put any solid objects or liquids such as water into the monitor. In case of an accident, unplug your monitor immediately and contact your dealer or iiyama service center. Using the monitor with any object inside may cause fire, electric shock or damage.

INSTALL THE MONITOR ON A FLAT, STABLE SURFACE

The monitor may cause an injury if it falls or is dropped.

DO NOT USE THE MONITOR NEAR WATER

Do not use where water may be splashed or spilled onto the monitor as it may cause fire or electric shock.

OPERATE UNDER THE SPECIFIED POWER SUPPLY

Be sure to operate the monitor only with the specified power supply. Use of an incorrect voltage will cause malfunction and may cause fire or electric shock.

CORRECT USE OF THE AC ADAPTER

Use only the AC Adapter provided by iiyama. Any deviation from this by using another type of adapter may result in damage to the accessory and the monitor by fire or electric shock.

DO NOT DISASSEMBLE THE AC ADAPTER

Disassembling the AC Adapter may expose you to the danger of fire or electric shock.

PROTECT THE CABLES

Do not pull or bend the power cable and signal cable. Do not place the monitor or any other heavy objects on the cables. If damaged, the cables may cause fire or electric shock.

ADVERSE WEATHER CONDITIONS

It is advisable not to operate the monitor during a heavy thunder storm as the continual breaks in power may cause malfunction. It is also advised not to touch the plug in these circumstances as it may cause electric shock.

DO NOT INGEST BATTERY, CHEMICAL BURN HAZARD

The remote control supplied with this product contains a coin battery. If the coin battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death. Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

CAUTION

INSTALLATION LOCATION

Do not install the monitor where sudden temperature changes may occur, or in humid, dusty or smoky areas as it may cause fire, electric shock or damage. You should also avoid areas where the sun shines directly on the monitor.

DO NOT PLACE THE MONITOR IN A HAZARDOUS POSITION

The monitor may topple and cause injury if not suitably located. Please also ensure that you do not place any heavy objects on the monitor, and that all cables are routed such that children may not pull the cables and possibly cause injury.

MAINTAIN GOOD VENTILATION

Ventilation slots are provided to keep the monitor from overheating. Covering the slots may cause fire. To allow adequate air circulation, place the monitor at least 10cm (or 4 inches) from any walls.

When removing the tilt stand, the ventilation slots on the back side of the monitor can be blocked. This may overheat the monitor and may cause fire or damage. Make sure to allow enough ventilation when removing the tilt stand. Operating the monitor on its back, side, upside down or on a carpet or any other soft material may also cause damage.

DISCONNECT THE CABLES WHEN YOU MOVE THE MONITOR

When you move the monitor, turn off the power switch, unplug the monitor and be sure the signal cable is disconnected. If you do not disconnect them, it may cause fire or electric shock.

UNPLUG THE MONITOR

If the monitor is not in use for a long period of time it is recommended that it is left unplugged to avoid accidents.

HOLD THE PLUG WHEN DISCONNECTING

To disconnect the power cable or signal cable, always pull it by the plug. Never pull on the cable itself as this may cause fire or electric shock.

DO NOT TOUCH THE PLUG WITH WET HANDS

Pulling or inserting the plug with wet hands may cause electric shock.

WHEN YOU INSTALL THE MONITOR ON YOUR COMPUTER

Be sure the computer is strong enough to hold the weight of the monitor, otherwise, you may damage your computer.

CAREFUL! PROTECT YOUR HANDS AND FINGERS

Be careful not to hurt your fingers or hands when you change the angle.

REMARK FOR 24/7 USAGE

This product is not specifically designed for 24/7 usage in all environments.

CAUTIONARY NOTICE ABOUT BATTERY

Battery inside the monitor can not be replaceable. If you need to replace the battery, contact your dealer or iiyama service center for safety concern.

OTHERS

ERGONOMIC RECOMMENDATIONS

To eliminate eye fatigue, do not operate the monitor against a bright background or in a dark room. For optimal viewing comfort, the monitor should be just below eye level and 40-60 cm (16-24 inches) away from your eyes. When using the monitor over a prolonged time, a ten minute break every hour is recommended as looking at the screen continuously can cause eye strain.

SPECIAL NOTES ON LCD MONITORS

The following symptoms are normal with LCD monitors and do not indicate a problem.

- NOTE**
- When you first turn on the LCD monitor, the picture may not fit in the display area because of the type of computer that is used. In this case, adjust the picture position to the correct position.
 - You may find slightly uneven brightness on the screen depending on the desktop pattern you use.
 - Due to the nature of the LCD screen, an afterimage of the previous screen may remain after switching the image, when the same image is displayed for hours. In this case, the screen can be recovered slowly by changing the image or turning off the Power Switch for some hours.

CUSTOMER SERVICE

- NOTE**
- If you have to return your unit for service and the original packaging has been discarded, please contact your dealer or iiyama service center for advice or replacement packaging.

CLEANING

- WARNING**
- If you drop any materials or liquids such as water into the monitor when cleaning, unplug the power cable immediately and contact your dealer or iiyama service center.

- CAUTION**
- For safety reasons, turn off the power switch and unplug the monitor before you clean it.

- NOTE**
- To protect the Touch screen surface, do not scratch or rub the screen with a hard object.
 - Never use any of the following strong solvents. These will damage the cabinet and the Touch screen surface.

Thinner	Benzine	Abrasive cleaner
Spray-type cleaner	Wax	Acid or Alkaline solvent
 - Touching the cabinet with any product made from rubber or plastic for a long time may cause degeneration or loss of paint on the cabinet.

CABINET Stains can be removed with a cloth lightly moistened with a mild detergent solvent. Then wipe the cabinet with a soft dry cloth.

TOUCH SCREEN Touch screen surface may be cleaned using a soft clean cloth moistened with mild window glass commercial cleaners or 50/50 mixture of water and IPA (ISO-propyl-alcohol). Don't use acid or alkaline solvent to clean the surface of the panel (or screen).

BEFORE YOU OPERATE THE MONITOR

FEATURES

- ◆ Supports Resolutions up to 1920 × 1080
- ◆ High Contrast 800:1 (Typical) / Brightness 450cd/m² (Typical)
- ◆ 10 Point Touch
- ◆ 2 × 2W Stereo Speakers
- ◆ VESA Mounting Standard (100mm×100mm) Compliant
- ◆ Keyhole for Security Lock

ENGLISH

CHECKING THE CONTENTS OF THE PACKAGE

The following accessories are included in your package. Check to see if they are enclosed with the monitor. If anything is missing or damaged, please contact your local iiyama dealer or regional iiyama office.

- AC Adapter *
- AC Adapter Plugs (Type: EU/UK)
- HDMI Cable
- USB Cable
- Remote Control (contains Coin Battery)
- Safety Guide
- Quick Start Guide

NOTE * Applicable AC Adapter

Type Name	FJ-SW126G1201500N
Manufacturer	SHENZHEN FUJIA APPLIANCE CO., LTD. 5F of Building F, Hengchangrong(xinghui) Sci-Tech. Park, Huaning Road, Longhua District, Shenzhen, Guangdong, P. R. China
Input Voltage	100-240VAC
Input AC Frequency	50/60Hz
Output Voltage	12.0VDC
Output Current	1.5A
Output Power	18.0W
Average Active Efficiency	85% minimum
Efficiency at Low Load (10%)	82.72% minimum
No-Load Power Consumption	0.1W maximum

SPECIAL NOTES ON TOUCH PANEL

Permanent damage can occur if Sharp Edged, Pointed or Metal items are used to activate Touch. This could invalidate any remaining warranty.


We recommend to use a plastic stylus (tip R0.8 or over) or finger.

INSTALLATION

CAUTION Before installation, make sure the wall, ceiling or desktop arm is strong enough to hold the necessary weight of the monitor and the mount.


[WALL MOUNTING]

CAUTION When you use with the wall mounting, in consideration of thickness of the mounting stage, tighten the M4 Screws (4pcs) which "L" length is 4mm to fasten the monitor. Using the screw longer than this may cause electric shock or damage because it may contact with the electrical parts inside the monitor.

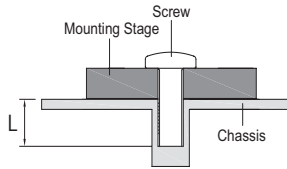







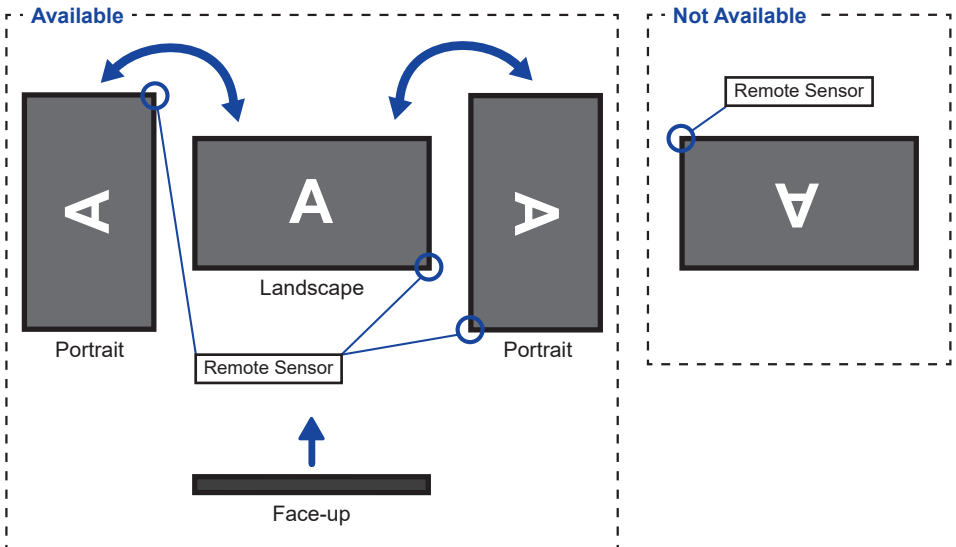


[ROTATING THE MONITOR]

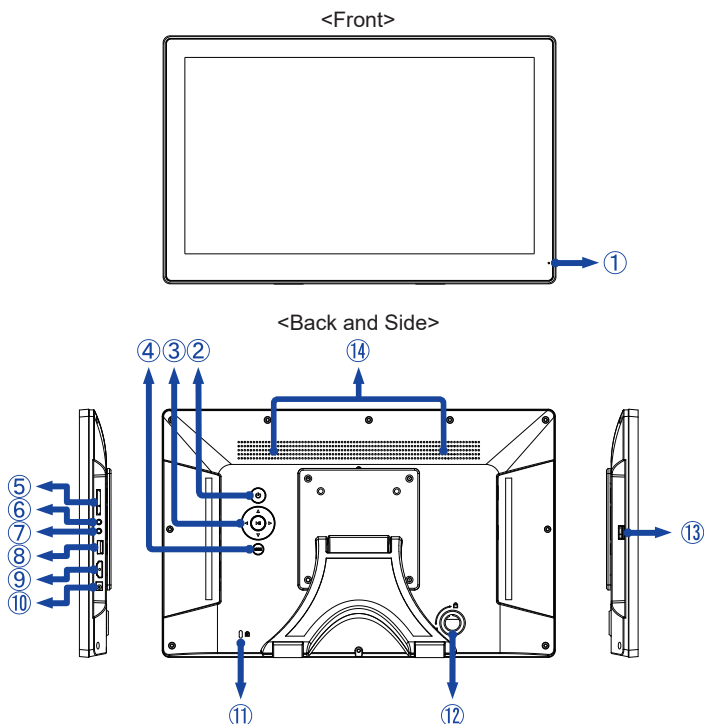 This monitor is designed to be compatible in landscape, portrait and face-up modes.



CONTROLS AND CONNECTORS

 


- ① Remote Sensor
- ② Power* / Input Select -Button () * with long press
- ③ Navigation Button
 - Up ()
 - Down ()
 - Left ()
 - Right ()
 - Play / Enter / Pause ()
- ④ Menu / Exit Button (MENU)
- ⑤ SD Card Slot (SD Card)
- ⑥ Headphone & Microphone Audio Jack ()
- ⑦ Audio / Visual Jack (AV)
- ⑧ USB(2.0) Downstream Connector (DC5V, 500mA) (USB)
- ⑨ HDMI Connector (HDMI)
- ⑩ Connector for AC Adapter ( : Direct current) (DC IN)
- ⑪ Keyhole for Security Lock

NOTE You can fasten a security lock and cable to prevent the monitor from being removed without your permission.

- ⑫ *Unused*
- ⑬ USB Upstream Connector (USB-TOUCH)
- ⑭ Speakers

FUNCTIONS OF REMOTE CONTROL

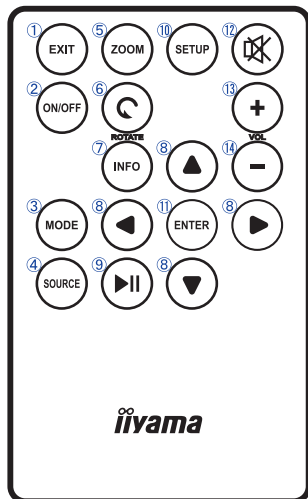

①	EXIT	Exits OSD Menu.
②	ON/OFF	Only available while the monitor is turned on.
③	MODE	Selects the display mode from Photo / Music / Video / Photo+Music.
④	SOURCE	Selects the input source from HDMI / AV / DMP (SD Card, USB device).
⑤	ZOOM	Zoom In / Out
⑥	ROTATE *	Rotates the displayed image 0 / 90 / 180 / 270 degrees clockwise.
⑦	INFO	Displays the operation menu for Photo / Music / Video.
⑧		Navigates through menus and settings. ▲: Up Button ▼: Down Button ◀: Left Button ▶: Right Button
⑨	▶	Play / Pause
⑩	SETUP	Starts the on screen menu.
⑪	ENTER	Select / Execute
⑫		Mute
⑬	VOL +	Increases the sound volume.
⑭	VOL -	Decreases the sound volume.

* Only available when playing photos with DMP input.

NOTE

- Pull out the insulation sheet from the remote control before use.
- This monitor has a remote sensor in the lower right corner of the front bezel. When using the remote control, direct it toward the sensor.
- Other manufacturers remote control will not work with this monitor. Use the provided Remote Control ONLY.

ECO MODE

The monitor is automatically turned on when you plug it in.


For HDMI input, the monitor enters into the Eco Mode after 30 seconds of no signal. Press the Power Button to restore the monitor from the Eco Mode.

To disable the Eco Mode, long-press the Power Button for 10 seconds or press the ROTATE Button on the remote control.


REMOTE CONTROL BATTERY REPLACEMENT

CAUTION Do not use any other batteries other than those specified in this manual for the Remote Control. Risk of explosion if battery is replaced by an incorrect type. Burst batteries or the electrolyte from these batteries may cause stains, fire or injury.


- ① Push the lock to the right and remove the battery compartment in the direction of the arrow.

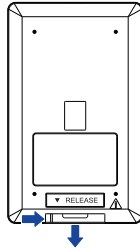

- ② Remove the old coin battery.
③ Place the new coin battery (CR2025) in the battery compartment with the + side facing up.

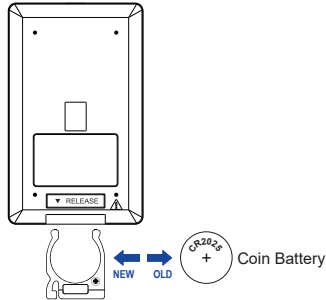

- ④ Insert the battery compartment back in the direction of the arrow.

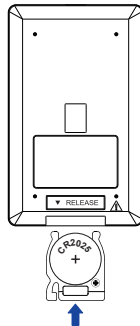

NOTE

- Replace with new battery when the Remote Control does not work close to the monitor. A replacement coin battery is not included with this product. Use a commercially available coin battery.
- Used batteries needed to follow the city rule to be discarded. (suggestion: to dispose of used batteries, please follow correct policy as per your council regulations)
- Batteries shall not be exposed to excessive heat such as sunshine, fire or the like.
- If you do not intend to use the Remote Control for a long period, remove the battery.

CONNECTING YOUR MONITOR


- ① Ensure that both the computer and the monitor are switched off.
- ② Connect the computer to the monitor with the HDMI Cable.
- ③ Connect the computer to the monitor with the USB Cable.
- ④ Connect the AC Adapter to the monitor first and then connect to the power source.
- ⑤ Turn on your monitor and computer.

NOTE

- Make sure that the building installation has a circuit breaker of 120/240V, 20A (maximum).
- The signal cables used for connecting the computer and monitor may vary with the type of computer used. An incorrect connection may cause serious damage to both the monitor and the computer. The cable supplied with the monitor is for a standard connector. If a special cable is required please contact your local iiyama dealer or regional iiyama office.
- The socket-outlet shall be installed near the equipment and shall be easily accessible.
- Excessive sound pressure from ear-/headphones can cause hearing damage/hearing loss.

[Example of Connection]


<Front and Side>

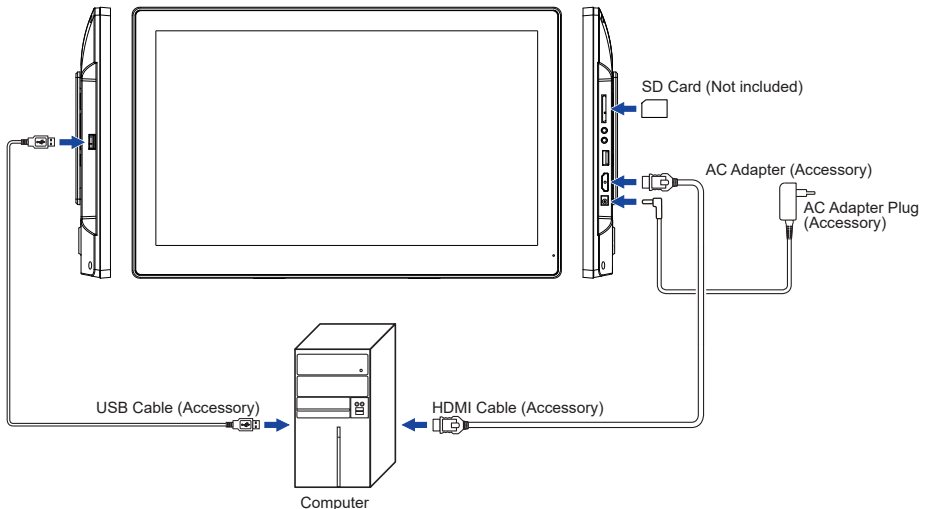

[ATTACHING THE AC ADAPTER PLUG]

You can change the AC Adapter Plug as required.

- ① Attach the appropriate type of plug to the AC Adapter in the correct orientation.
- ② Push the tab to detach the plug from the AC Adapter.

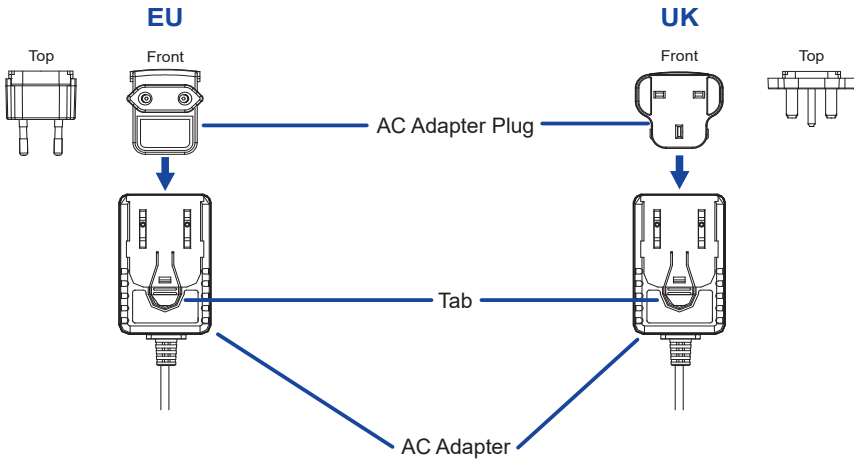


ADJUSTING THE VIEWING ANGLE

- ① Put a piece of soft cloth on the table beforehand to prevent the monitor from being scratched. Lay the monitor flat on a table with front face down.
- ② Hold the monitor and pull the stand up.
- ③ Stand the monitor in the upright position. Adjust the screen tilt to your preference.

NOTE

- Do not touch the LCD screen when you change the angle. It may cause damage or break the LCD screen.
- Careful attention is required not to catch your fingers or hands when you change the angle.
- When packaged, the stand is folded. Do not use in this state otherwise injury may occur if it falls or is dropped.

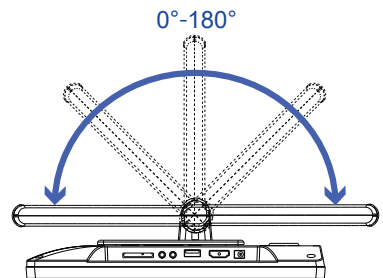

COMPUTER SETTING

■ Signal Timing

Change to the desired signal timing listed on page 20: COMPLIANT TIMING.

■ TOUCH support operation system

	Mouse	Digitizer	Remarks
Windows8/8.1/10/11	✓	✓	
Windows7	✓	✓	
Linux	✓	✓	Kernel 2.6.38 and above
Android * ¹	✓	✓	Kernel 2.6.38 and above
Functions	Click Drag Double-Click	Mouse function Right-Click Flick Visual feedback	

✓ : Supported

*¹ As Android is very divers, check with your device manufacturer if your device supports the touch function (for software developers; the controller is PID: 2575 / VID: 0402)




*² Windows XP / Vista are not supported by Microsoft anymore.

*³ Chrome OS is supported. Chrome OS is auto updating and based on the (latest) Linux kernel.


■ Touch Input Settings in Dual Screen Mode

① Connect the primary monitor to the computer first.

Set Control Panel > Hardware and Sound > Tablet PC Settings > Display > Setup.

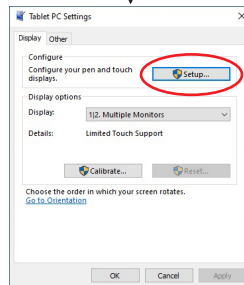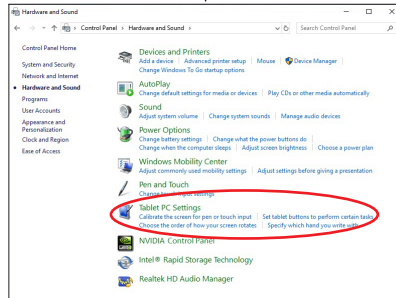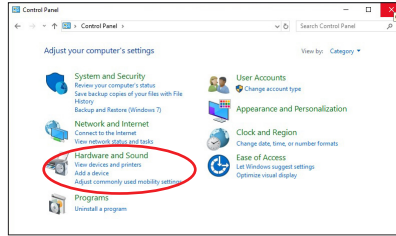

 The following message will appear on the screen. Please follow the instructions.



② After setting ①, connect a second monitor and perform the setup as in ①.

NOTE The monitors are recognized as dual-display, and touch operation cannot be performed on two monitors at the same time.
You can perform touch operation on only one of the monitors.

OPERATING THE MONITOR

To create the best picture, your iiyama LCD monitor has been preset at the factory with the COMPLIANT TIMING shown on page 20. You are also able to adjust and set the picture by following the button operation with the Remote Control as shown below.

Input Source : **DMP**


- ① Press the **SETUP** Button to start the On Screen Display feature. There are Menu items which can be switched by using the ◀ / ▶ Buttons.



- ② Select the Menu item and press the **ENTER** Button. Then, use the ◀ / ▶ Buttons to select the desired medium or setting.
- ③ Press the **ENTER** Button again.
- ④ Press the **EXIT** Button to leave the menu, and the settings you just made would be automatically saved.

Input Source : **HDMI** **AV**

- ① Press the **SETUP** Button to start the On Screen Display feature. There are Menu items which can be switched by using the **▲ / ▼** Buttons.

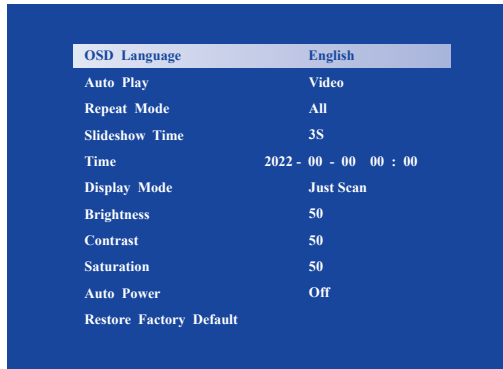






OSD Language	English
Auto Play	Video
Repeat Mode	All
Slideshow Time	3S
Time	2022 - 00 - 00 00 : 00
Display Mode	Just Scan
Brightness	50
Contrast	50
Saturation	50
Auto Power	Off
Restore Factory Default	

- ② Select the Menu item and press the **ENTER** Button. Then, use the **◀ / ▶** Buttons to select the desired setting.
- ③ Press the **ENTER** Button again.
- ④ Press the **EXIT** Button to leave the menu, and the settings you just made would be automatically saved.

NOTE

- The **EXIT** Button can also be used to return to the previous step.
- Any changes are automatically saved in the memory when the On Screen Display disappears. Turning off the power should be avoided while using the Menu.

ON-SCREEN MENU CONTENTS

DMP				
Item	Option			
 Photo	USB			
	SD			
 Music	USB			
	SD			
 Video	USB			
	SD			
 Calendar	Confirms the date and current time.			
HDMI		AV		DMP
 Settings	OSD Language	English Italiano Русский	Español Nederlands Czech	Français Polski Deutsch
	Auto Play	Off Video	Photo Photo+Music	Music
	Repeat Mode	Off	One	All
	Slideshow Time	3S 30S	5S 60S	10S
	Time	Date Hour	Month Minute	Year Sec
	Display Mode	Just Scan* ¹ Zoom1* ² Panorama* ⁴	16:9* ² Auto* ³	4:3* ² Fit* ³
	Brightness* ⁵	0-100		
	Contrast	0-100		
	Saturation	0-100		
	Auto Power	Off Timer 3	Timer 1	Timer 2
	Restore Factory Default	Yes	No	

*¹ For HDMI input only

*² For HDMI/AV inputs only

*³ For DMP input only

*⁴ For HDMI/DMP inputs only

*⁵ Adjust the Brightness when you are using the monitor in a dark room and feel the screen is too bright.

TROUBLE SHOOTING

If the monitor fails to operate correctly, please follow the steps below for a possible solution.

1. Perform the adjustments described in FUNCTIONS OF REMOTE CONTROL or OPERATING THE MONITOR, depending on the problem you have. If the monitor does not get a picture, skip to 2.
2. Consult the following items if you cannot find an appropriate adjustment item in FUNCTIONS OF REMOTE CONTROL or OPERATING THE MONITOR, or if the problem persists.
3. If you are experiencing a problem which is not described below or you cannot correct the problem, discontinue using the monitor and contact your dealer or iiyama service center for further assistance.

Problem	Check
① The picture does not appear.	<input type="checkbox"/> The AC Adapter is firmly seated in the connector and the socket. <input type="checkbox"/> The Power Button is turned ON. <input type="checkbox"/> The AC socket is live. Please check with another piece of equipment. <input type="checkbox"/> Increase the Brightness. <input type="checkbox"/> The pins of the connectors are not crooked or broken.
② The screen is shaking.	<input type="checkbox"/> The power voltage is within the specification of the monitor.
③ No sound	<input type="checkbox"/> The sound volume is turned up. <input type="checkbox"/> The mute function is active.
④ The touch screen does not work.	<input type="checkbox"/> It takes about 15 seconds or more to activate the P-CAP touch screen function after power is turned off and on. This is normal operation. Please wait for a certain period.

RECYCLING INFORMATION

For better environment protection please don't dispose your monitor.
Please visit our web site: www.iiyama.com for monitor recycling.

APPENDIX

Design and specifications are subject to change without prior notice.

SPECIFICATIONS

Touch Screen	Technology	Projected capacitive 10pt touch
	Light transmission	85%
	Hardness	6H
	Thickness	1.8mm
Size Category		15.6"
LCD Panel	Panel technology	IPS (ADS)
	Size	Diagonal: 39.5cm (15.6")
	Pixel pitch	0.17925mm H × 0.17925mm V
	Brightness	450cd/m ² (Typical), 385cd/m ² (with Touch panel)
	Contrast ratio	800 : 1 (Typical: with Touch panel)
	Viewable angle	Horizontal : 170 degrees, Vertical: 170 degrees (Typical)
	Response time	>25ms (Gray to Gray)
Display Colors		Approx. 16.7M
Maximum Resolution		1920 × 1080, 2.1 MegaPixel
External IO Port		SD × 1, Headphone & Microphone Audio (ø3.5mm mini jack) × 1, Audio / Visual (ø3.5mm mini jack) × 1, USB2.0 Downstream × 1, HDMI × 1, USB2.0 Upstream × 1
Speakers		2W × 2 (Stereo speakers)
Maximum Screen Size		344.16mm W × 193.59mm H / 13.5" W × 7.6" H
Power Source		12.0VDC, 1.5A
Power Consumption ^{*1}		7W typical
Dimensions ^{*2} Net Weight		388.0 × 245.0 × 159.5(26.5) ^{*3} mm / 15.3 × 9.7 × 6.3(1.0) ^{*3} " (W×H×D) 2.6kg / 5.8lb (Excluding the AC Adapter)
Environmental Considerations		Operating: Temperature 0 to 40°C / 32 to 104°F Humidity 20 to 80% (No condensation) Storage: Temperature -10 to 60°C / 14 to 140°F Humidity 10 to 90% (No condensation)
Approvals		CE, UKCA


NOTE ^{*1} When the USB devices are not connected.

^{*2} With the stand fully open

^{*3} () : Depth of monitor

DIMENSIONS

With the stand fully open

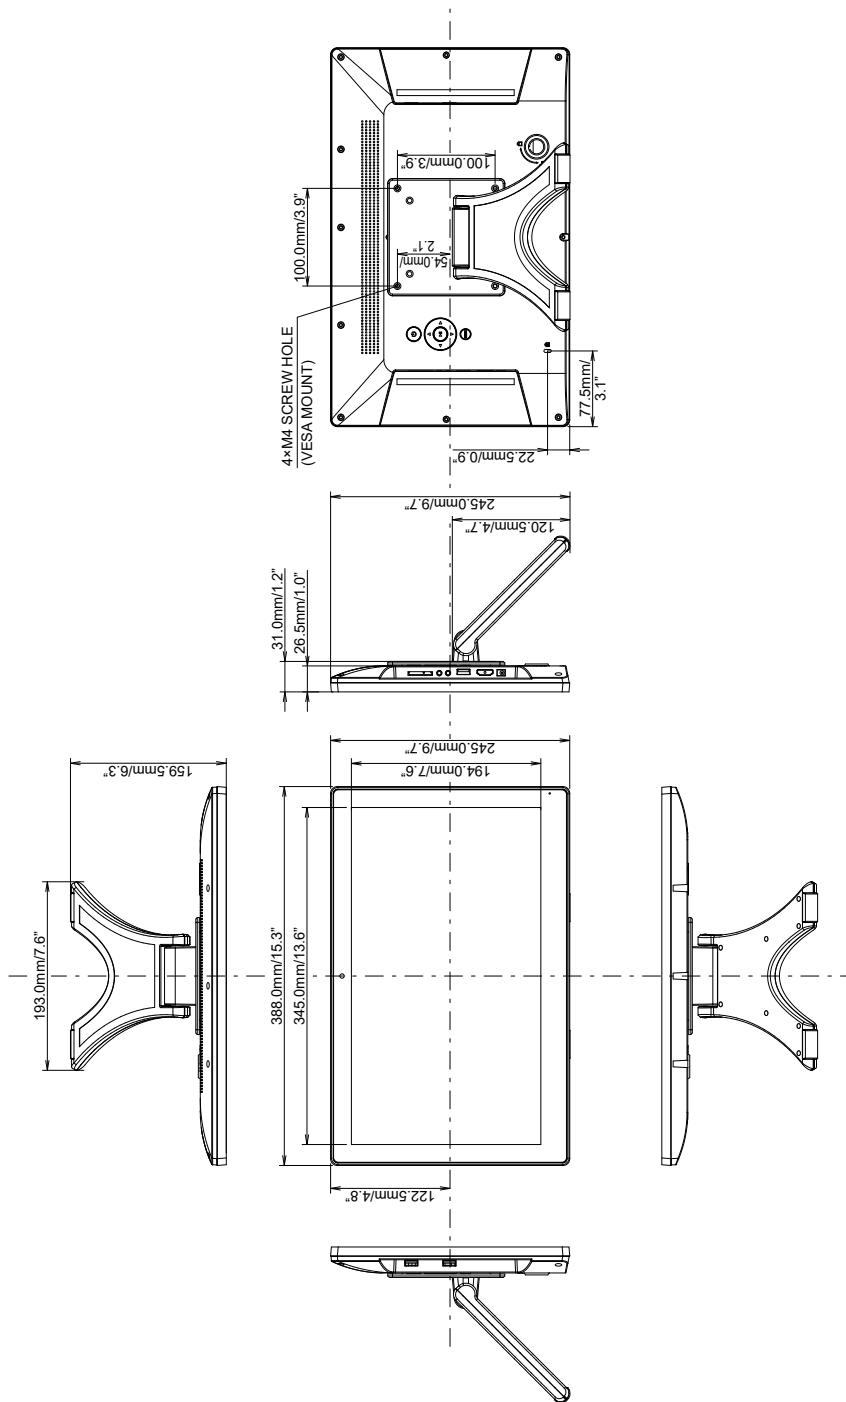

COMPLIANT TIMING

Video Mode	Horizontal Frequency	Vertical Frequency	Dot Clock
640 × 480	31.469kHz	59.940Hz	25.175MHz
	37.500kHz	75.000Hz	31.500MHz
800 × 600	37.879kHz	60.317Hz	40.000MHz
	46.875kHz	75.000Hz	49.500MHz
1024 × 768	48.363kHz	60.004Hz	65.000MHz
	60.023kHz	75.029Hz	78.750MHz
1280 × 1024	63.981kHz	60.020Hz	108.000MHz
	79.976kHz	75.025Hz	135.000MHz
1680 × 1050	65.290kHz	60.000Hz	146.250MHz
1920 × 1080	67.500kHz	60.000Hz	148.500MHz