


## <Custom Boot Animation>

To use Boot Logo, prepare "bootanimation.zip" (uncompressed zip file).

### ● bootanimation.zip

Contents of bootanimation.zip

- The image folder (Contains PNG images named in ascending numbers)
- The desc.txt file

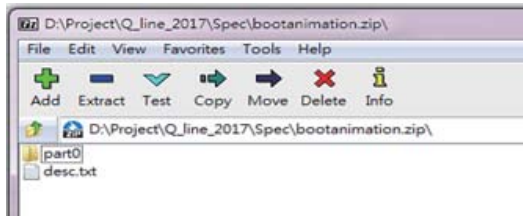

#### ■ The image folder

The png images named in ascending number such as 0000.png or 0001.png are included in this folder.

There is no upper limit for the number of folders.

- Supported file format: PNG
- Supported resolution: 1920 x 1080

#### ■ The desc.txt file

This file defines how the images in the folder are displayed.

Save the Bootanimation in the following format.

- width Height Frame-rate
- mode Loop delay-time Folder1
- mode Loop delay-time Folder2

An example of a desc.txt file is:

- 1920 1080 30
- p 1 0 part0
- p 0 10 part1

-1920 1080 30  
    (a)      (b)  
-p 1 0 part0  
  (c) (d) (e) (f)  
-p 0 10 part1  
  (c) (d) (e) (f)


- Screen resolution
- Frame rate (Number of images to be displayed per second)
- p: Playback stops immediately when the monitor's activation is completed.
- Define repeat mode  
0: Loops playback until the monitor's activation is completed.  
1: Play only once.
- Interval timer between animation.  
For example, if it is 10, playback of part1 starts after 10ms after the playback of part0 stops.
- Name of the image folder

### ■ Zip file

Select everything (image folders and desc.txt) and zip them into a new uncompressed zip archive using your favorite compression utility such as 7zip or WinRAR.

- If using 7zip, set “compression level” to “Store”.
- If using WinRAR, set “compression method” to “Store”.

### ● Apply the custom bootanimation

1. Save the bootanimation.zip file in your USB or SD card.
2. Insert your USB or SD card into an USB port or SD card slot of the monitor.
3. Set “Logo” of Configuration2 in the OSD menu to “User”.
4. Press the  HOME+1668 on the remote control to go to Settings → Signage display → General setting → Boot Logo → Choose Boot Animation page.
5. Select bootanimation.zip in USB or SD card and press SAVE.  
bootanimation.zip is saved in / data / local.



SAVE: Save bootanimation.zip in / data / local.

FORGET: Delete bootanimation.zip from / data / local.

CANCEL: Close the page without saving.

6. Reboot the monitor after the above steps 1 to 5 have been done.  
Make sure that the animation you selected is displayed on start screen.