

# USER MANUAL

# *ProLite*

## LCD Monitor

ENGLISH

### *ProLite TE8668MIS*

Thank you very much for choosing the iiyama LCD monitor.

We recommend that you take a few minutes to read this comprehensive manual carefully before installing and switching on the monitor. Please keep this manual in a safe place for your future reference.



## Dear user, we congratulate you on the purchase of your iiyama LCD.

For details on warranty and locally used pixel policies that apply directly after installation of your product please check the iiyama website.

## To report a fault, please contact your local support centre found at [www.iiyama.com/service](http://www.iiyama.com/service)

### Things to check before you call the iiyama information line

- | if the power cable is connected securely and turned on?
- | if the display has been turned on?
- | if the signal cable is connected securely and the correct input selected?
- | if the computer has been restarted with the display connected?
- | if the graphics card is correctly installed with the latest drivers possible?
- | if the correct native resolution has been selected via 'Display Properties'?
- | If the R/G/B signal configuration is correct?
- | if the displays On Screen Menu is shown?
- | if the correct brightness and contrast settings have been set?
- | if given display tolerances and compatibility have been considered?
- | if via the On Screen Menu you have performed a Factory Reset/Recall?

### Before reporting the screen defect, please prepare the following information/evidence:

- | model number \*
- | purchase receipt and serial number \*
- | name and address for collection
- | telephone/fax number, for availability during the day
- | convenient collection date (date, time)
- | short description of the defect

### Important Note:

If there is no fault found in the collected equipment after inspection, the transferring party shall incur charges for transport and administration.

If you have checked all of the above and there is still no picture, call our information line for assistance in your country.

\* see the identification plate on the back of the case.

## CE MARKING DECLARATION OF CONFORMITY

This LCD monitor complies with the requirements of the EC/EU Directive 2014/30/EU "EMC Directive", 2014/35/EU "Low Voltage Directive", 1995/5/EC "R&TTE Directive" and 2011/65/EU "RoHS Directive".

### Warning

This is a class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

IYAMA CORPORATION: Wijkerveerstraat 8, 2131 HA Hoofddorp, The Netherlands

Model No. : PL8668



We recommend recycling of used product. Please contact your dealer or iiyama service center. Recycle information is obtained via the Internet, using the address: <http://www.iiyama.com>

You can access the Web page of different countries from there.

- We reserve the right to change specifications without notice.
- All trademarks used in this user manual are the property of their respective owners.

# TABLE OF CONTENTS

FOR YOUR SAFETY.....	1
SAFETY PRECAUTIONS.....	1
SPECIAL NOTES ON LCD MONITORS.....	3
CUSTOMER SERVICE.....	5
CLEANING.....	5
BEFORE YOU OPERATE THE MONITOR.....	6
FEATURES.....	6
CHECKING THE CONTENTS OF THE PACKAGE.....	6
UNPACKING.....	7
SPECIAL NOTES ON.....	7
CONTROLS AND CONNECTORS : MONITOR.....	8
INSTALLATION.....	10
CONTROLS AND CONNECTORS : REMOTE CONTROL.....	12
PREPARING THE REMOTE CONTROL.....	13
BASIC OPERATION.....	14
CONNECTING YOUR MONITOR.....	17
COMPUTER SETTING.....	20
OPERATING THE MONITOR.....	22
ADJUSTMENT MENU CONTENTS.....	24
SCREEN ADJUSTMENTS.....	38
POWER MANAGEMENT FEATURE.....	41
TROUBLE SHOOTING.....	42
RECYCLING INFORMATION.....	43
APPENDIX.....	44
SPECIFICATIONS : ProLite TE8668MIS-B1AG.....	44
DIMENSIONS.....	45
COMPLIANT TIMING.....	46

# FOR YOUR SAFETY

## SAFETY PRECAUTIONS

### WARNING

#### **STOP OPERATING THE MONITOR WHEN YOU SENSE TROUBLE**

If you notice any abnormal phenomena such as smoke, strange sounds or fumes, unplug the monitor and contact your dealer or iiyama service center immediately. Further use may be dangerous and can cause fire or electric shock.

#### **NEVER REMOVE THE CABINET**

High voltage circuits are inside the monitor. Removing the cabinet may expose you to the danger of fire or electric shock.

#### **DO NOT PUT ANY OBJECT INTO THE MONITOR**

Do not put any solid objects or liquids such as water into the monitor. In case of an accident, unplug your monitor immediately and contact your dealer or iiyama service center. Using the monitor with any object inside may cause fire, electric shock or damage.

#### **INSTALL THE MONITOR ON A FLAT, STABLE SURFACE**

The monitor may cause an injury if it falls or is dropped.

#### **DO NOT USE THE MONITOR NEAR WATER**

Do not use where water may be splashed or spilt onto the monitor as it may cause fire or electric shock.

#### **OPERATE UNDER THE SPECIFIED POWER SUPPLY**

Be sure to operate the monitor only with the specified power supply. Use of an incorrect voltage will cause malfunction and may cause fire or electric shock.

#### **PROTECT THE CABLES**

Do not pull or bend the power cable and signal cable. Do not place the monitor or any other heavy objects on the cables. If damaged, the cables may cause fire or electric shock.

#### **ADVERSE WEATHER CONDITIONS**

It is advisable not to operate the monitor during a heavy thunder storm as the continual breaks in power may cause malfunction. It is also advised not to touch the plug in these circumstances as it may cause electric shock.

## CAUTION

### INSTALLATION LOCATION

Do not install the monitor where sudden temperature changes may occur, or in humid, dusty or smoky areas as it may cause fire, electric shock or damage. You should also avoid areas where the sun shines directly on the monitor.

### DO NOT PLACE THE MONITOR IN A HAZARDOUS POSITION

The monitor may topple and cause injury if not suitably located. Please also ensure that you do not place any heavy objects on the monitor, and that all cables are routed such that children may not pull the cables and possibly cause injury.

### MAINTAIN GOOD VENTILATION

Ventilation slots are provided to keep the monitor from overheating. Covering the slots may cause fire. To allow adequate air circulation, place the monitor at least 10 cm (or 4 inches) from any walls. Do not remove the tilt stand when operating the monitor. Ventilation slots on the back of the cabinet will be blocked and the monitor may overheat if the stand is removed. This may cause fire or damage. Operating the monitor on its back, side, upside down or on a carpet or any other soft material may also cause damage.

### DISCONNECT THE CABLES WHEN YOU MOVE THE MONITOR

When you move the monitor, turn off the power switch, unplug the monitor and be sure the signal cable is disconnected. If you do not disconnect them, it may cause fire or electric shock.

### UNPLUG THE MONITOR

If the monitor is not in use for a long period of time it is recommended that it is left unplugged to avoid accidents.

### HOLD THE PLUG WHEN DISCONNECTING

To disconnect the power cable or signal cable, always pull it by the plug. Never pull on the cable itself as this may cause fire or electric shock.

### DO NOT TOUCH THE PLUG WITH WET HANDS

Pulling or inserting the plug with wet hands may cause electric shock.

### WHEN YOU INSTALL THE MONITOR ON YOUR COMPUTER

Be sure the computer is strong enough to hold the weight of the monitor, otherwise, you may damage your computer.

## OTHERS

### ERGONOMIC RECOMMENDATIONS

To eliminate eye fatigue, do not operate the monitor against a bright background or in a dark room. For optimal viewing comfort, the monitor should be just below eye level and 40-60 cm (16-24 inches) away from your eyes. When using the monitor over a prolonged time, a ten minute break every hour is recommended as looking at the screen continuously can cause eye strain.

## SPECIAL NOTES ON LCD MONITORS

- The following symptoms are normal with LCD monitors and do not indicate a problem.

### NOTE

- When you first turn on the LCD monitor, the picture may not fit in the display area because of the type of computer that is used. In this case, adjust the picture position to the correct position.
  - You may find slightly uneven brightness on the screen depending on the desktop pattern you use.
  - Due to the nature of the LCD screen, an afterimage of the previous screen may remain after switching the image, when the same image is displayed for hours. In this case, the screen is recovered slowly by changing the image or turning off the Power Switch for hours.
- This LCD cannot be used outdoors.
  - This LCD cannot be used with the screen facing upwards.
  - If you use a cable longer than the supplied one, the picture quality is not guaranteed. Touch function can be disrupted if the USB cable length exceeds 3m.

## USAGE CONFIRMATION

This product is designed for optimum usage at 24hours per day.  
The display is compatible for usage in Landscape applications.

## IMAGE PERSISTENCE / IMAGE STICKING

Please be aware that all LCD screens can experience Image Persistence or Image Sticking. This occurs when a residual image remains visible on a screen when static images are displayed for long periods of time. LCD Image Persistence is not permanent but constant images being displayed for a long period of time should be avoided.

To counteract Image Persistence, turn off the monitor for as long as the previous image was displayed, so if an image was on the monitor for 1 hour and there is evidence of a residual or “ghost” image, you should turn off the monitor for 1 hour in order to clear the residual image.

For all LFD products, iiyama recommends displaying moving images and utilising a moving screen saver at regular intervals whenever the screen is idle. You could also turn off the monitor when not in use to assist the prevention.

Other ways to reduce the risk of Image Persistence will be to utilise the FAN-on function (if available), Low Backlight and Low Brightness settings.

## FOR EXTENDED USE AS A PUBLIC DISPLAY

### ■ Image Sticking on LCD Panel

When a static image is displayed for hours, an electric charge trace remains near the electrode inside the LCD producing a “ghost” image. (Image Persistence).

Image Persistence is not a permanent feature.

### ■ Recommendations

To prevent Image Sticking and promote longer life expectancy of display, we recommend the following:

1. Avoid static images displayed for long periods – change static images on continuous loop.
2. Turn off monitor when not in use, either by remote control or use Power Management or Schedule functions.
3. When monitor is installed in high ambient temperature environment(s) or in an enclosed position, utilise the Cooling Fan, Screen Saver and Low Brightness functions.
4. Suitable ventilation for any monitor is an expectation of any installation – climate control systems may need to be employed.
5. We strongly recommend utilisation of active cooling with fans for long operation times or high ambient temperature environments.



## CUSTOMER SERVICE

### NOTE

- If you have to return your unit for service and the original packaging has been discarded, please contact your dealer or iiyama service center for advice or replacement packaging.

## CLEANING

### WARNING

- If you drop any materials or liquids such as water into the monitor when cleaning, unplug the power cable immediately and contact your dealer or iiyama service center.

### CAUTION

- For safety reasons, turn off the power switch and unplug the monitor before you clean it.

### NOTE

- To protect the LCD panel, do not scratch or rub the screen with a hard object.
- Never use any of the following strong solvents. These will damage the cabinet and the LCD screen.

Thinner	Benzine	Abrasive cleaner
Spray-type cleaner	Wax	Acid or Alkaline solvent

- Touching the cabinet with any product made from rubber or plastic for a long time may cause degeneration or loss of paint on the cabinet.

### CABINET

Stains can be removed with a cloth lightly moistened with a mild detergent solvent. Then wipe the cabinet with a soft dry cloth.

### LCD

Periodic cleaning with a soft dry cloth is recommended.

### SCREEN

Don't use tissue paper etc. because these will damage the LCD screen.

# BEFORE YOU OPERATE THE MONITOR

## FEATURES

- ◆ Supports Resolutions up to 3840 × 2160
- ◆ High Contrast 1200:1 (Typical: without glass) / Brightness 375cd/m<sup>2</sup> (Typical: without glass)
- ◆ Digital Character Smoothing
- ◆ Automatic Set-up
- ◆ Stereo Speakers  
2 × 12W(Typical)/16W(Maximum) Stereo Speakers
- ◆ Plug & Play VESA DDC2B Compliant  
Windows<sup>®</sup> XP/Vista/7/8/8,1/10 Compliant
- ◆ Power Management (VESA DPMS Compliant)
- ◆ VESA Mounting Standard (800mm×600mm) Compliant
- ◆ Glass with AG coating

## CHECKING THE CONTENTS OF THE PACKAGE

The following accessories are included in your package. Check to see if they are enclosed with the monitor. If anything is missing or damaged, please contact your local iiyama dealer or regional iiyama office.

- |   |                   |                     |
|---|-------------------|---------------------|
| ■ Power Cable*                            | ■ HDMI Cable      | ■ USB Cable         |
| ■ Remote Control                          | ■ Battery (2pcs)  | ■ Touch Pen (3pcs)  |
| ■ Cable ties (For cable management, 6pcs) | ■ EU Energy Label | ■ Quick Start Guide |
| ■ POP Label                               | ■ Safety Guide    |                     |

### CAUTION

\* The rating of the Power Cable enclosed in 120V area is 10A/125V. If you are using a power supply higher than this rating, then a power cable with a rating of 10A/250V must be used. However, all guarantees and warranties are void for any problems or damage caused by a power cable not supplied by iiyama.

## UNPACKING

### CAUTION

Moving the monitor requires at least two people. If not, it may drop and could result in a serious injury.


## SPECIAL NOTES ON

### CAUTION

Permanent damage can occur if Sharp Edged, Pointed or Metal items are used to activate Touch. This could invalidate any remaining warranty. We recommend you use a plastic stylus (tip R0.8 or over) or finger.


# CONTROLS AND CONNECTORS : MONITOR

<Front>

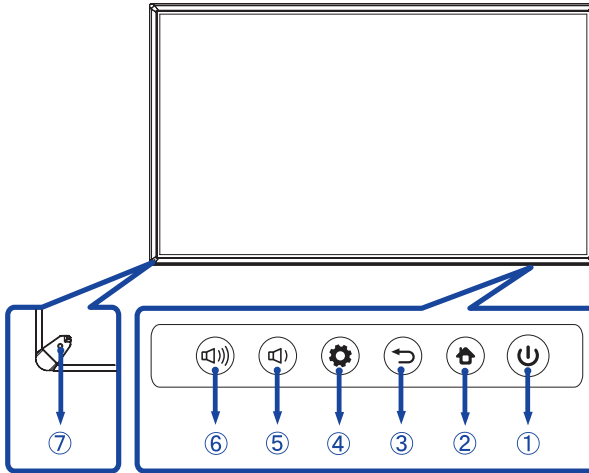

①	POWER INDICATOR		Power Button
		Blue	Normal Operation
		Red & Blue	Flash : Screen Off function is on. IR signal is received.
		Red	Power Management Press at least 2 seconds to enter Power Management mode.
②	HOME		Back to main interface.
③	RETURN		Returns to a previous menu or closes the OSD Menu.
④	MENU		Menu Button
⑤			Volume - Button
⑥			Volume + Button
⑦	Remote Sensor		Remote Sensor

<Back>

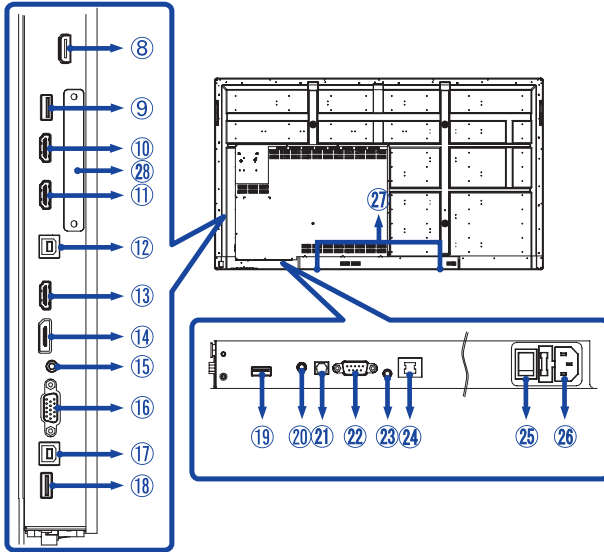

ENGLISH

⑧	HDMI OUT	HDMI	HDMI Connector
⑨ ⑲	USB2.0	USB2.0	USB Connector
⑩ ⑪ ⑬	HDMI1 IN (2.0) HDMI2 IN (1.4a) HDMI3 IN (1.4a)	HDMI	HDMI Connector
⑫ ⑰	TOUCH1 (for HDMI1/HDMI2) TOUCH2 (for HDMI3/DP/ VGA)	USB	Touch USB Connector
⑭	DP IN	DisplayPort	DisplayPort Connector
⑮	AUDIO IN	Mini Jack	Audio Connector
⑯	VGA IN	VGA	VGA Connector
⑱	USB3.0	USB3.0	USB Connector
⑳	AV IN	Mini Jack	Video Connector
㉑	SPDIF OUTPUT	SPDIF	SPDIF Connector
㉒	RS232C	RS232C 9pin	RS232C Connector
㉓	AUDIO OUT	Mini Jack	Headphone Connector
㉔	LAN	RJ45	RJ45 Connector (This network port is only used for Android system)
㉕	AC SWITCH   (ON) / ○ (OFF)	MAIN POWER	Main Power Switch
㉖	AC IN	AC-INLET	AC Connector( ~ : Alternating current) (AC-IN)
㉗	SPEAKERS		Speakers
㉘	Option WiFi module slot		Option WiFi module slot


## INSTALLATION

### CAUTION

- Follow the manual instructions for the type of mount you have selected. Refer all servicing to qualified service personnel.
- Moving the monitor requires at least two people.
- Before installing, please make sure the wall is strong enough to hold the necessary weight of the display and the mount.

ENGLISH

### [WALL MOUNTING]

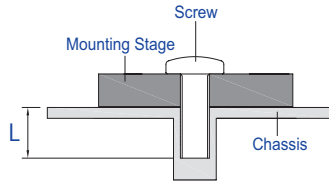

### CAUTION

When using the wall mounting, consideration of thickness of the mounting stage needs to be taken. Tighten the M8 Screw with washer which "L" length is 25mm to fasten the monitor. Using a screw longer than this may cause electric shock or damage because it may contact with the electrical parts inside the monitor.


### [INSTALLATION NOTE]

The touch kit of this monitor is an optical device that utilizes infrared light source and sensitive sensors for touch detection.

Notice the incident light that contains large quantities of infrared light may affect touch screen operation and performance.


Please install it with care as follows to ensure reliable touch performance.

Intense light / Specular light / Focus spotlight / Wide spread light / Direct sunlight / Indirect sunlight from the window and/or the glass door. / Not install the touch monitor right under the light source.

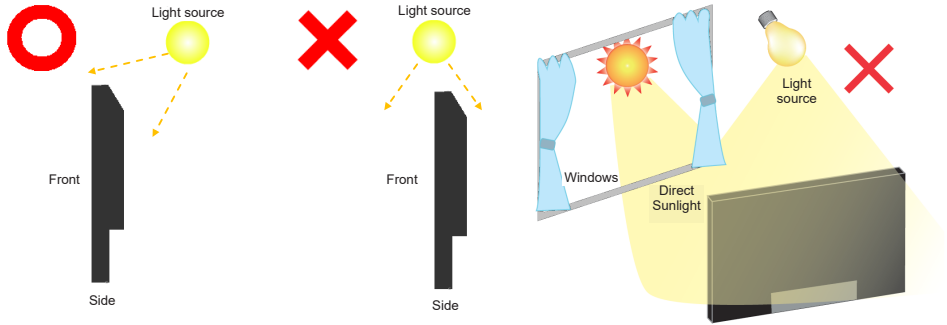


### [ROTATING THE DISPLAY]

It is designed to be compatible in landscape mode.

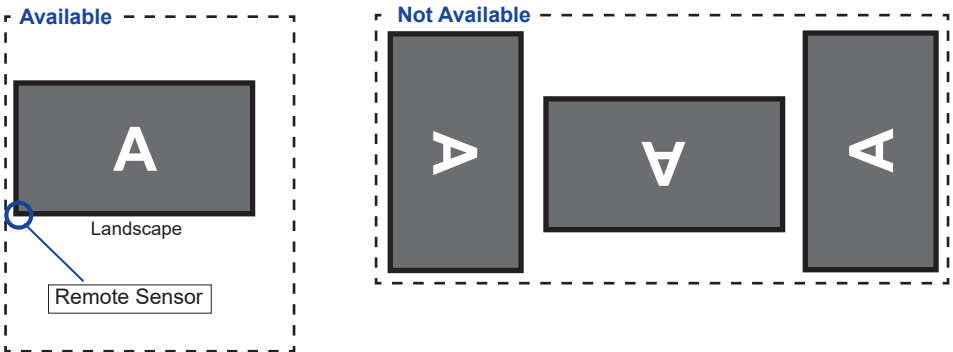

## CONTROLS AND CONNECTORS : REMOTE CONTROL

ENGLISH

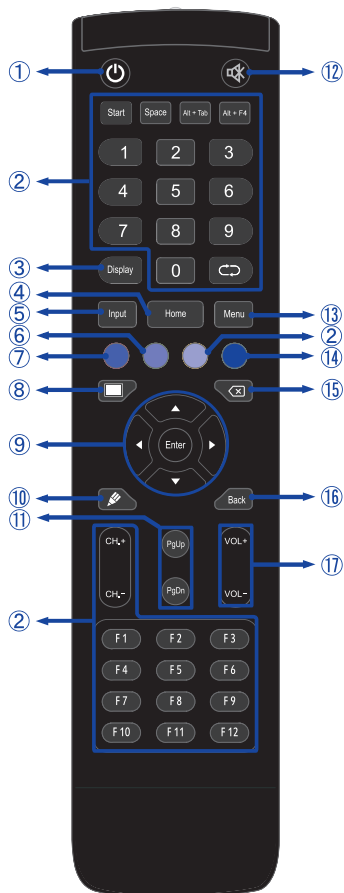

①		Turns the monitor ON and OFF.
②		Not available on this model.
③	Display	Provides source and resolution information.
④	Home	Android system main screen button.
⑤	Input	Selects the source.
⑥	Green	Lock and unlock Buttons function.
⑦	Red	Lock and unlock Buttons and Touch function.
⑧	Screen Off	Turns the backlight On and Off.
⑨		Navigates through submenus and settings. ▲: Up Button ▼: Down Button ◀: Left Button ▶: Right Button
	Enter	Confirms your selection or save changes.
⑩		Quickly start "Writing Software".
⑪	PgUp / PgDn	When select File: The first / Last When Internet browser: Scroll Up / Scroll Down
⑫		Turns on or off the mute function when the Menu is not displayed.
⑬	MENU	Displays the "Screen Setting" menu when the Android system is not displayed.
⑭	Blue	Freeze the picture.
⑮		Backspace
⑯	Back	Returns to a previous menu or closes the OSD Menu.
⑰	VOL+ / VOL-	VOL-: Decreases the sound volume. VOL+: Increases the sound volume.




## PREPARING THE REMOTE CONTROL

To use the remote control, insert the two dry batteries.


### CAUTION

Do not use any other batteries other than those specified in this manual for the Remote Control. Do not insert old and new batteries together in the Remote Control. Make sure that the terminals match the "+" and "-" indications in the battery compartment. Burst batteries or the electrolyte from these batteries may cause stains, fire or injury.


- ① Open back cover of battery component on the back of remote control.

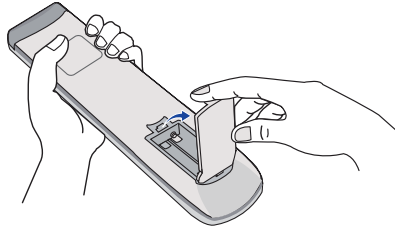

- ② Align and insert two AAA batteries according to their plus and minus ports (as indicated in the remote control).

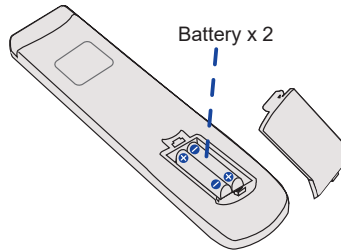

- ③ After battery is installed, close the back cover of battery components, and make the following clip buckled to the bottom.

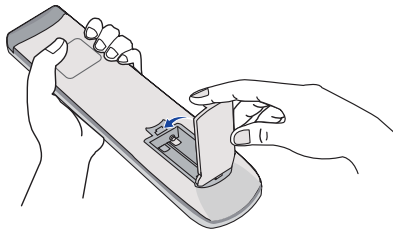

### NOTE

- Replace with new batteries when the Remote Control does not work close to the monitor. Use AAA dry batteries.
- Operate the Remote Control by pointing it toward the Remote Sensor on the monitor.
- Other manufacturers remote control will not work with this monitor. Use the provided Remote Control ONLY.
- Used batteries needed to follow the local rules to be discarded. (Suggestion: to dispose of used batteries please follow correct policy as per your local regulations.)

## BASIC OPERATION

### ■ Turning the monitor ON

The monitor is turned On and the Power Indicator turns to Blue when you press the POWER Button on the monitor or the Remote Control. The monitor is turned Off and the Power Indicator turns to Red when you press the POWER Button on the monitor or the Remote Control. Press again to turn On the monitor.

#### NOTE

Even when using the power management mode or turning OFF the Power Switch, the monitor will consume a small amount of electricity. Disconnect the Power Cable from the power supply whenever the monitor is not in use or during the night, to avoid unnecessary power consumption.


[Monitor]




[Remote Control]

 


### ■ Display the adjustment menu page

The menu page appears on the screen when you press the  MENU Button on the monitor or the Menu Button on the Remote Control.

The menu page disappears when you press the  Return Button on the monitor or the Back Button on the Remote Control.

[Monitor]



[Remote Control]



### ■ Move the cursor vertically

Select adjustment by pressing the ▲ / ▼ Button on the remote control while the menu page is displayed on the screen.

#### [Remote Control]




 
### ■ Move the cursor horizontally

Select menu or setting, or perform the adjustment by pressing the ◀ / ▶ Button on the remote control while the menu page is displayed on the screen.


#### [Remote Control]


 
## ■ Adjust the volume of sound

Press the  /  Button on the monitor or the VOL- / VOL+ Button on the remote control to adjust the volume of sound when the menu page is not displayed on the screen.

[Monitor]



[Remote Control]



## ■ Switch the input signal

The Input setting menu appears on the screen when you press the Input button on the remote control.

[Remote Control]




## CONNECTING YOUR MONITOR

- ① Ensure that both the computer and the monitor are switched off.
- ② Connect the computer to the monitor with the signal cable.
- ③ Connect the computer to the monitor with the Touch USB Cable.
- ④ Connect the Power Cable to the monitor first and then to the power supply.
- ⑤ Turn on your monitor (Main Power Switch and Power Switch) and computer.

### NOTE

- The signal cables used for connecting the computer and monitor may vary with the type of computer used. An incorrect connection may cause serious damage to both the monitor and the computer. The cable supplied with the monitor is for a standard connector. If a special cable is required please contact your local iiyama dealer or regional iiyama office.
- For connection to Macintosh computers, contact your local iiyama dealer or regional iiyama office for a suitable adaptor.
- Make sure you tighten the finger screws at each end of the Signal Cable.
- When Touch USB cable connected than wait for 5 seconds and the touch function is ready to go. It can be activated by pen, finger or any other pointer.
- Excessive sound pressure from ear-/headphones can cause hearing damage/hearing loss.

[Example of Connection]

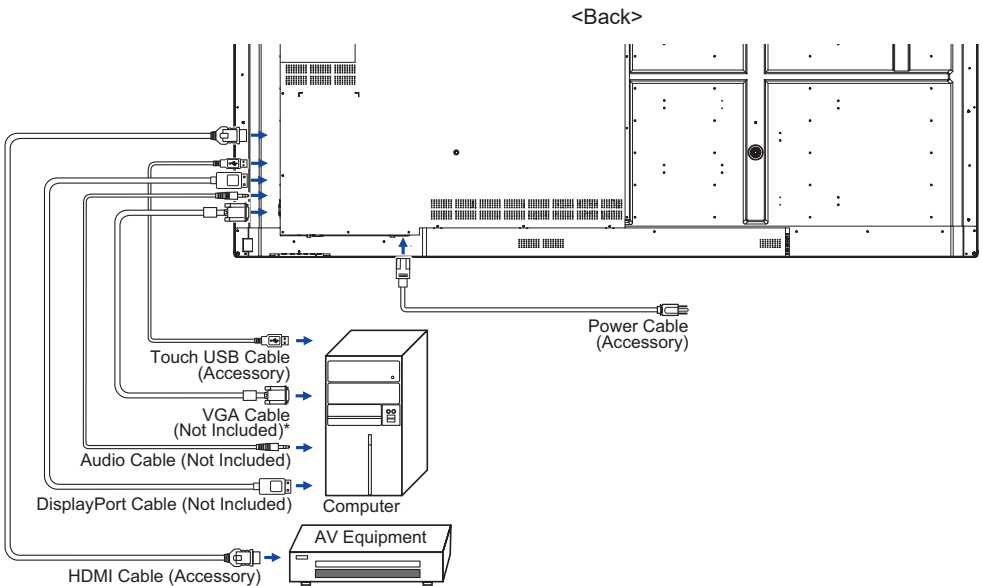

\* VGA cable is not supplied with the monitor. If you use low quality VGA cable, it may cause a result of electro-magnetic interference. Please contact the iiyama Support Centre in your country if you wish to connect the monitor via the VGA input.

## [ Connection example with the peripheral device ]


### CAUTION

Turn off the power switch and unplug the monitor and peripherals before connection to avoid electric shock or damage.

### NOTE

- Refer to the user manual of peripherals at the same time.
- Ensure you have the necessary cables as required.


ENGLISH

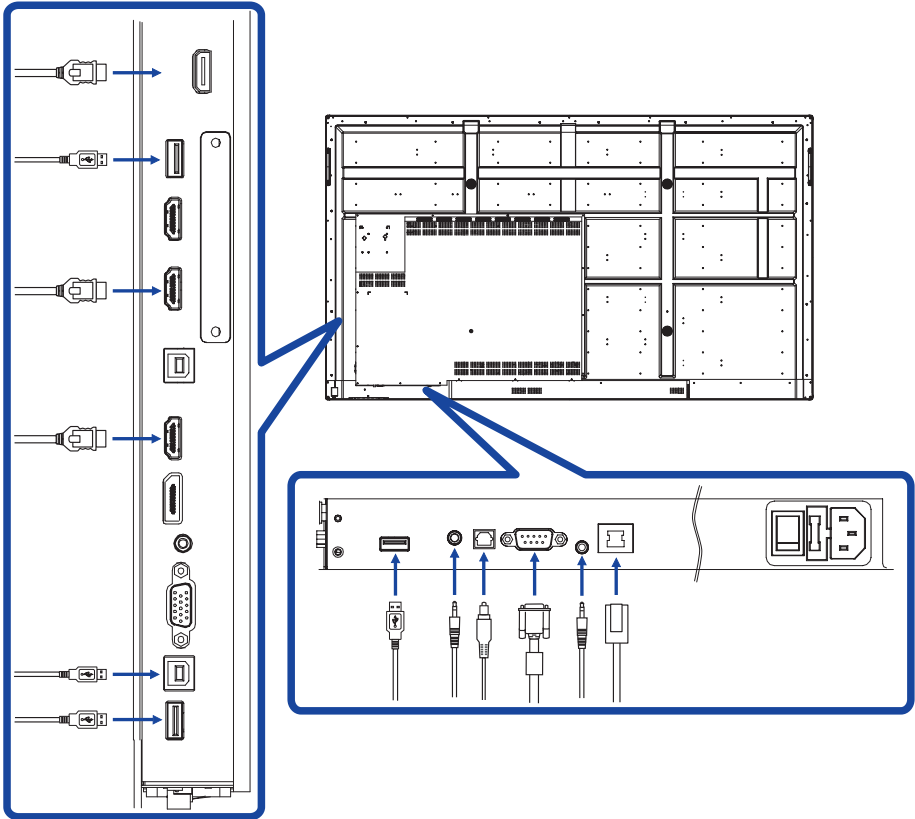


[ About the HDMI out ]

■ Example of Digital video connection


VGA

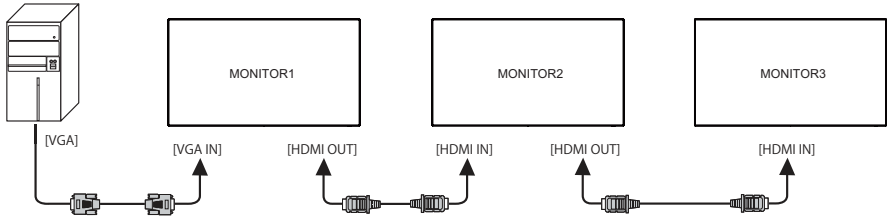


HDMI1

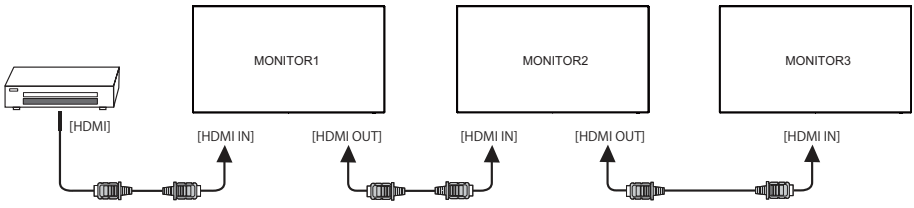

DisplayPort

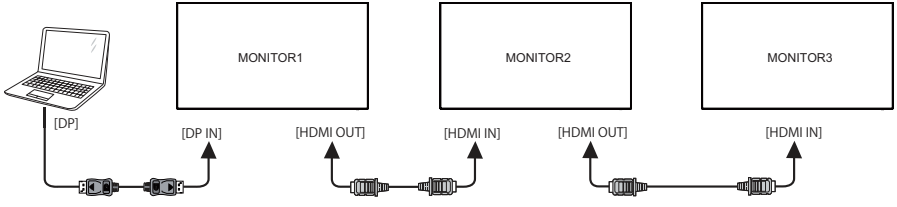

AV

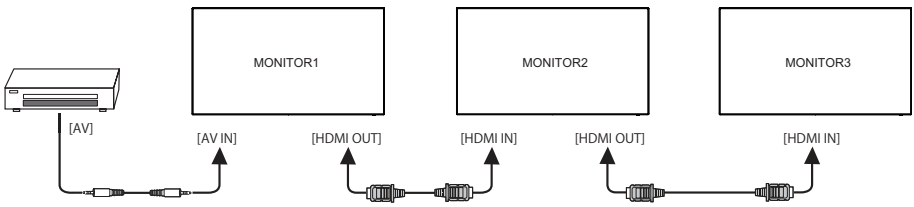

**NOTE** Connection conditions

- When 3 monitors are connected:
  - VGA input (operating at 1920 × 1080 resolution) : MONITOR1,2,3(1920 × 1080)
  - HDMI input (operating at 3840 × 2160 resolution) : MONITOR1(3840 × 2160), MONITOR2,3(1920 × 1080)
  - DisplayPort input (operating at 1920 × 1080 resolution) : MONITOR1,2,3(1920 × 1080)
  - AV input (operating at 480i resolution) : MONITOR1,2,3(480i)

## COMPUTER SETTING

### ■ Signal Timing

Change to the desired signal timing listed on page 46: COMPLIANT TIMING.

### ■ Windows XP/Vista/7/8/8.1/10 Plug & Play

The iiyama LCD monitor complies with DDC2B of VESA standard. The Plug & Play function runs on Windows /XP/Vista/7/8/8.1/10 by connecting the monitor to DDC2B compliant computer with the Signal Cable supplied.

For installation on Windows XP: The monitor Information File for iiyama monitors may be necessary for your computer and obtained via the Internet, using the address:

<http://www.iiyama.com>

### NOTE

- For additional information on how to download the driver for your touch screen monitor, please access the internet site noted above.
- Monitor Drivers are not required in most cases for Macintosh or Unix operating systems. For further information, please contact your computer dealer first for advice.

### ■ Procedure for turning ON the Power Switch

Turn ON the monitor first, and then the computer.



■ **MULTI-TOUCH :**

This monitor complies with DDC2B of VESA standard. (Plug&play compliant)

The MULTI-TOUCH function runs on Windows7/8/8.1/10 by connecting the monitor to DDC2B compliant computer with the USB cable supplied.

■ **TOUCH support operation system :**

Microsoft Windows 2000 (64 bit and 32 bit)

Microsoft Windows XP (64 bit and 32 bit)

Microsoft Windows Vista (64 bit and 32 bit)

Microsoft Windows 7 (64 bit and 32 bit)

Microsoft Windows 8/8.1/10 (64 bit and 32 bit)

Mac OS X V10.6.4 & higher HID for single touch only

Linux 3.0 & higher need patch for multi-touch

3.5 & higher HID for multi-touch

Not support Windows earlier versions.

	Windows 7* <sup>5</sup> ,8/8.1* <sup>6</sup> ,10* <sup>6,7,8</sup>	Windows7* <sup>4</sup>	Vista	XP	2000	Mac OSX	Linux
Default mouse* <sup>1</sup>	○	○	○	○	○	○	○
Touch digitizer* <sup>2</sup>	○	○	○	×	×	×	×
Windows gestures* <sup>3</sup>	○	×	×	×	×	×	×

\*<sup>1</sup> Default mouse (click, drag, double-click and right-click)

\*<sup>2</sup> Touch digitizer (click, drag /selection, double-click, right-click, flick and visual feedback)

\*<sup>3</sup> Digitizer with Windows7/8/8.1/10 multi-touch gestures

\*<sup>4</sup> Windows 7 - Starter and Home Basic version

\*<sup>5</sup> Windows 7 - Home Premium, Professional, Enterprise and Ultimate versions

\*<sup>6</sup> Windows 8/8.1/10 need non-OEM version for multi-touch support

\*<sup>7</sup> Windows10 - Home, Pro, Enterprise and Education

Not supported for Mobile, Mobile Enterprise, IoT Core.

\*<sup>8</sup> Windows10 - Touch do no support for "touchpad gestures". Touchpad gesture is for touchpad on notebook.


# OPERATING THE MONITOR

To create the best picture, your iiyama LCD monitor has been preset at the factory with the COMPLIANT TIMING shown on page 46. You are also able to adjust the picture by following the button operation shown below. For more detailed adjustments, see page 38 for SCREEN ADJUSTMENTS.

- ① Take middle point position on the bottom of display screen as starting point, use the touch pen to drag towards screen center position to call up touch menu, as show below. Or press Input button on the remote control.




- ② Start the On Screen Display feature. "General setting" is displayed. Then, press the menu button on the remote control or click **OSD** on General setting menu with touch pen. There are additional Menu items which can be switched by using the **◀ / ▶** Buttons on the remote control or with the touch pen.

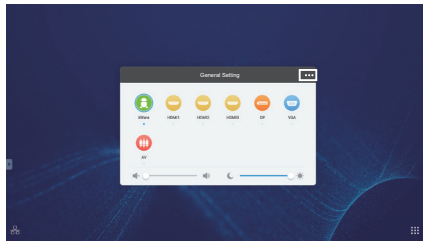

- ③ Select the Menu item of the adjustment you want to make. Use the **◀ / ▶** Buttons on the remote control or with the touch pen to highlight the desired adjustment item. Then, press the Enter button on the remote control.
- ④ Use the **◀ / ▶** Buttons on the remote control or with the touch pen to make the appropriate adjustment or setting.
- ⑤ Press the Back Button on the remote control or click blank area outside menu with the touch pen to exit menu.

For example, to correct for vertical position, select Menu item of "Adjust setting". Select "Verticle adjust" by using the **▲ / ▼** Buttons on the remote control or with the touch pen.

Use the **◀ / ▶** Buttons on the remote control or with the touch pen to change the vertical position settings. The vertical position of the overall display should be changing accordingly while you are doing this.

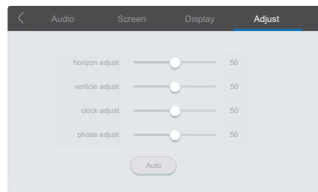

Press the Back Button on the remote control or click blank area outside menu with the touch pen, it ends, all changes are saved in the memory.

**NOTE**

- The Back Button on the remote control can be used to return previous menu item.
- Any changes are automatically saved in the memory when the On Screen Display disappears. Turning off the power should be avoided while using the Menu.
- Adjustments for Image Position, Clock Frequency and Phase are saved for each signal timing. Except for these adjustments, all other adjustments have only one setting which applies to all signal timings.

**Direct**

\* Available for Remote Control only.

- **Freeze Function:**

Press the Blue button when Menu is not displayed.  
Repeat successively to activate/deactivate the function.

- **Backlight Function:**

Press the Screen Off button when Menu is not displayed.  
Repeat successively to On/Off the function.


- **Input Function:**

Press the Input button when Menu is not displayed.

- **Volume Function:**

Press the VOL+/VOL- buttons when Menu is not displayed.

- **Mute Function:**

Press the  button when Menu is not displayed.  
Repeat successively to On/Off the function.

- **Kiosk Mode Function:**

Disable touch functions, buttons, Menu etc.  
Press the following buttons when Menu is not displayed.

On : Input → 7 → 9 → 7 → 9

Off : Input → 8 → 9 → 8 → 9

Default Kiosk mode input set to HDMI1, for other input, please use remote controller to change the default setting for the first time.

Even when the monitor is turned off and the power is turned on again, the Kiosk mode when the power is turned off is kept.

**[LOCK MODE]**





- **Back Controller Button:** \* Available for Remote Control only.

Press the Green button when Menu is not displayed, will lock/unlock the Back Controller Button Lock function.

- **Back Controller Button & Touch function (3 type methods):**


- Press the Red button when Menu is not displayed, will lock/unlock the Back Controller Button Lock function and Touch function. \* Available for Remote Control only.







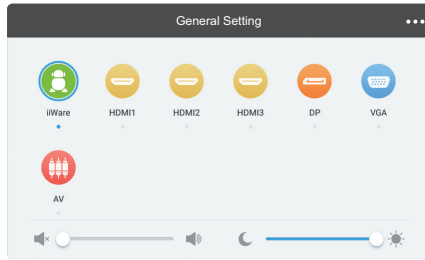

- Press the Input, VOL +, VOL-, VOL + and VOL- button in order.  
\* Available for Remote Control only.

- Press the , ,  and  button in order when Input menu is displayed.  
\* Available for Back Controller only.

## ADJUSTMENT MENU CONTENTS


### General setting









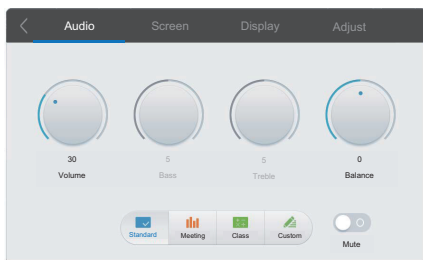









Adjustment Item	Problem / Option		Button to Press	
Input *	<b>Direct</b>	iiWare	Select the iiWare input.	
		HDMI1	Select the HDMI1 input.	
		HDMI2	Select the HDMI2 input.	
		HDMI3	Select the HDMI3 input.	
		DP	Select the DP input.	
		VGA	Select the VGA input.	
		AV	Select the AV input.	
Volume	<b>Direct</b>	Too soft Too loud	   	
Brightness	<b>Direct</b>	Brightness of backlight is reduced.	   	


\* The switching of the signal input take a few seconds.

## Audio setting



Adjustment Item	Problem / Option		Button to Press
Volume <b>Direct</b>	Too soft Too loud		   
Bass	Too weak Too strong		   
Treble	Too weak Too strong		   
Balance	Left side speaker louder Right side speaker louder		   
Sound Mode	Standard	Standard	
	Meeting	Sound quality suitable for the conference.	
	Class	Sound quality suitable for the classroom.	
	Custom	Custom sound quality.	
Mute <b>Direct</b>	<input type="radio"/>	Return the sound volume to the previous level.	
	<input type="checkbox"/>	Turn off the sound.	

## Screen setting

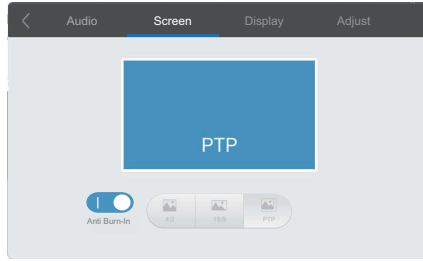

















Adjustment Item	Problem / Option		Button to Press
Aspect ratio	16:9	Displays all picture in 16:9 aspect ratio.	
	4:3	Displays all picture in 4:3 aspect ratio.	
	PTP *	Display the picture point to point.	
Anti Burn-In	<input type="radio"/>	Anti Burn-In is turned on.	
	<input type="checkbox"/>	Anti Burn-In is turned off.	

\* Point To Point, to optimize touch performance when 3840 × 2160 input. (not available under Android or not 3840 × 2160 input timing)

## Display setting























Adjustment Item	Problem / Option		Button to Press
Brightness* <sup>1</sup>	Too dark Too bright		   
Contrast	Too dull Too intense		   
Hue* <sup>2</sup>	Purplish Greenish		   
Sharpness* <sup>2</sup>	Too soft Too sharp		   
Picture Mode	Standard	For general windows environment and monitor default setting.	
	Bright	Enlarge brightness and vivid.	
	Soft	Reduce brightness and soften.	
	Custom	Displays a picture on a screen set by Image Settings adjustments.	
Color Temp	Standard	Greenish white	
	Cold	Bluish white	
	Warm	Reddish white	

\*<sup>1</sup> Adjust the Brightness when you are using the monitor in a dark room and feel the screen is too bright.

\*<sup>2</sup> Only AV Input.

## Adjust setting \*1



Adjustment Item	Problem / Option	Button to Press
Horizon adjust	 Too far to the left	 
	 Too far to the right	 
Verticle adjust	 Too low	 
	 Too high	 
Clock adjust	 Too narrow	 
	 Too wide	 
Phase adjust	To correct flickering text or lines	 
Auto *2	<input type="radio"/>	Adjust H/V Position, Clock and Phase automatically.
		Return to Menu.

\*1 Only VGA input.

\*2 For best results, use the Auto Adjust in conjunction with the adjustment pattern. See page 38 for SCREEN ADJUSTMENTS.




**[Application]**

Click  with the touch pen.

or

Click  with the touch pen. Then, click  with the touch pen.



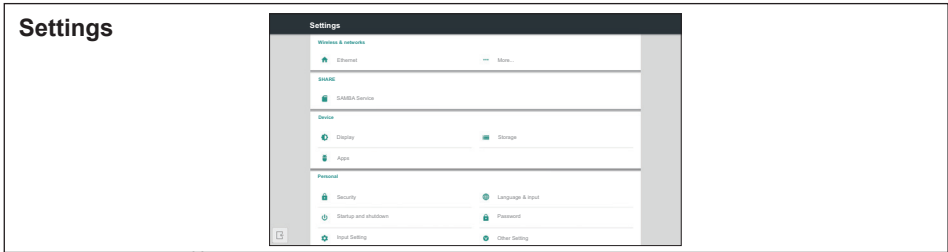


Adjustment Item	Problem / Option		Button to Press	
Wireless & networks	WiFi* <sup>1</sup>	Set the WiFi function On/Off and pairing to WiFi device.		
	Bluetooth* <sup>1</sup>	Set the Bluetooth function On/Off and pairing to Bluetooth device.		
	Ethernet	Set the wired network. Network : On/Off, LOCAL NETWORK SETTING, IP address, Default gateway, Netmask, DNS, Proxy		
SHARE	SAMBA Service	SAMBA sharing service.		
Device	Display	Set the wallpaper that is built into the system, set the External source display and the Anti Burn-In. Wallpaper, HDMI Out Encryption setting* <sup>2</sup> : ON/OFF, Anti Burn-In: Interval 2 / 3 / 5 / 30 / 60 mins		
	Storage	To display the internal system and USB disk.		
	Apps	View each application.		
Personal	Security	Credential storage (Certificate Authorities)		
	Language & input	Set display language, keyboard and input method. Language: Deutsch, English, Français, Nederlands, Polski, Русский, Italiano, Čeština		
	Startup and shutdown	Startup channel	Startup channel	Last shutdown channel
				Default startup channel (Select the source)
		Startup and shutdown option		Standby after startup (black screen) : Turn off the backlight.
			<b>NOTE</b>	Press the Screen Off button on the remote control to return the screen.
	Opening logo		iiyama Logo displayed when the monitor is turned on.	
			Close power off reminder.	
	Timer switch	Boot time / Off time	Select the time of each, and select day of the week or everyday or the business days.	
		<b>NOTE</b>	<ul style="list-style-type: none"> <li>■ To enable the timer switch, click  with the touch pen.</li> <li>■ To delete a timer, click  with the touch pen.</li> </ul>	
Password	Set the screen lock password. (4-digit)			
Input setting	Change the Input name to Nickname.			

\*<sup>1</sup> WiFi and Bluetooth can only be used when Option WiFi Module is installed.

\*<sup>2</sup> If the connected monitor does not support HDCP, images are not displayed if "HDMI Out Encryption setting" is set to On. (EDID can not be read)  
In that case, please set it to Off.



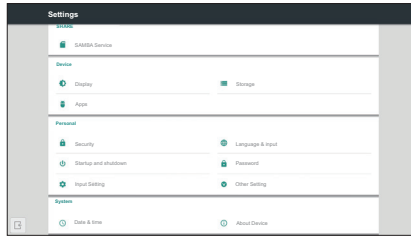

# Settings



Adjustment Item	Problem / Option		Button to Press
Personal	Other Setting	Floating Style Setting	Floating Style Setting Set the toolbar. Slide Toolbar / Floating Annotation tool
			Floating Annotation Setting Set the shortcut menu. Available in all channel / Available in iiWare
			Note Writing Setting Set the Note Writing Setting. Single finger / Multi-finger
			Touch Menu Touch Menu function is turn On / Off.
System	Date & time	Set automatic or manually date and time.	
	About Device	Version information of each software.	


## ■ Slide toolbar appears


The slide toolbar can be displayed on either left side or right side of the screen.

-  : Back
-  : Home
-  : Recent tasks
-  : Annotation tools

 : Annotate

 : Marker

 : Take a screenshot

 : QR note sharing

Users can share their notes and annotations through a QR code by clicking on the QR code icon in the slide toolbar or from the Note application menu. To download the notes, users only have to scan the QR Code on screen.

\* Make sure the device is on the same LAN as the display.

 : Cloud Drive (Google Drive / One Drive)

### Save to Cloud Drive


Users can save notes and annotations in Note directly to one of the cloud drives by clicking on the Cloud Storage icon in the menu. To change the way files are saved to the Cloud drive, users can select two options in the cloud storage overview.

#### Use the default account

When checked, all notes will be saved automatically to the default Cloud drive. Users will not be able to select a cloud drive.


#### Use the default file name when saving

When checked, all notes will be saved to the selected cloud drive with the default file name. Users will not be able to (re)name the file.

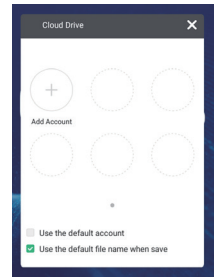


 : Close

 : Screen Capture


 : Freeze the picture.

 : Zoom +

 : Zoom -

 : Return to the original screen size.

 : Exit

 : Tools

 : SpotLight

 : CountDown

 : StopWatch

 : AirClass(WIFI Teamwork)

(Available when the optional WiFi Module OWM011/SI01 is installed or with a working LAN connection. Participants need to be on the same network.)

 : Voter


 : Responder


 : Message

 : Manager

 : Exit

## <How to use AirClass>

- ① The teacher press the  AirClass.
- ② Use the device to scan the QR code. (device: Android and mobile device on the same network)
- ③ The students enter his/her name and press Enter to login.

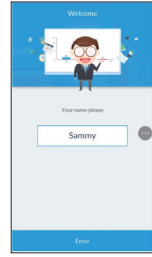


- ④ There are two interfaces:


Answer


Message

- ⑤ Press "ENTER THE CLASS".

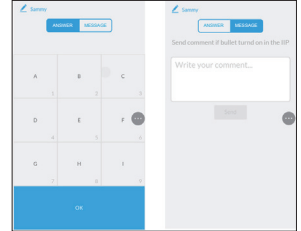

- ⑥ Answer


1. The teacher write a question on the note and press the  Voter.
2. The teacher select Single Choice Mode or Multiple Choice Mode.
3. The number of students who are logged in is displayed. Then press BEGIN.
4. The students enter their answers on their page and press OK.

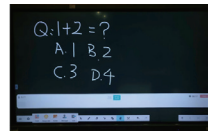

5. Confirm the number of students to answer and press FINISH to finish.
6. The answer statistics is displayed, so the teacher selects the correct answer.



7. When press EXPLAIN, the statistical display becomes smaller and it becomes convenient for the teacher to explain.

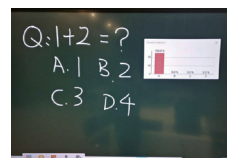


**⑦ Message**

1. The teacher press the 🗨️ Responder and press the START to start the question.
2. When the students press the OK, the student's name is displayed on the screen.



 3. The teacher press the 🗨️ Message activates this function.
4. The students write their own opinions and press the Send.




- ⑧ The teacher can press the 👤 Manager to display the QR code to let other students to enter the class at any time.

**[Note(Quick Note)]**


This is a writing software.


Can write the characters, Lines and pictures like a whiteboard. Also, can insert an image or file.


Click  or  with the touch pen.

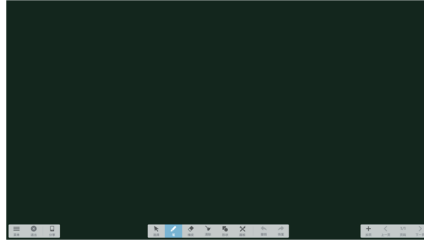


 : Display menu of Note.

 : Save the Note writing and open a new Note.

 : Open the file.

 : Save the current document to image format to file browser.

 : Inport the picture.

 : Export as IMG/PDF/SVG/IWB.

 : Cloud Storage (Google Drive / One Drive)

**Save to Cloud Drive**


Users can save notes and annotations in Note directly to one of the cloud drives by clicking on the Cloud Storage icon in the menu. To change the way files are saved to the Cloud drive, users can select two options in the cloud storage overview.


**Use the default account**

When checked, all notes will be saved automatically to the default Cloud drive. Users will not be able to select a cloud drive.


**Use the default file name when saving**

When checked, all notes will be saved to the selected cloud drive with the default file name. Users will not be able to (re)name the file.

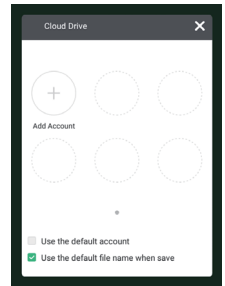

 : Change the color of the background.


 : Adjust the brightness.

 : Return to main screen.

 : QR note sharing


Users can share their notes and annotations through a QR code by clicking on the QR code icon in the slide toolbar or from the Note application menu. To download the notes, users only have to scan the QR Code on screen.


\* Make sure the device is on the same LAN as the display.

 : Select the object being edit, can move, can zoom.

 : Change the width and color of the stroke. (Pen/Handwriting size/Handwriting color)


 : Erase the specified object.

 : Clear the page.

 
 : Draw the shape.


 : Call out Drawing board. (Pen/Palette/Color picker/Color disk)


 : Cancel

 : Redo

 : To the previous page.


 : To the next page.

 : Thumbnail display

 : Add new page after the last page.

## [File Browser (Finder)]

Click  or  with the touch pen.

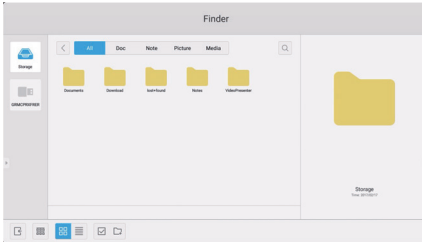

Browse the files stored in the internal storage device, the USB storage and Cloud Drive.

### ● Supported Format

Office : PPT, Word, Excel, PDF (Open the file by using the WPS Office)


Note : Note files, screenshot


Video : .avi .asf/.asx .ts .mp4 .mkv .mov .rmvb .3gp .mpg/.mpeg .flv .m4v

Picture : .jpg .jpeg .png .bmp .gif

Audio : .mp3 .wma .aac .ogg .wav .ape .flac

 : Search

 : Return to the previous.

 : Sort menu (Sorts Name, Type, Size, Time.)

 : Default display


 : Detail display


 : Deselect

 : Select

 : Select all

 : New folder

 : Copy

 : Paste

 : Cut

 : Delete

 : Rename

 : More

 : Exit

 : Cloud Drive (Only 'One Drive' cloud drives are supported)

### Save to Cloud Drive


Users can save notes and annotations in Note directly to one of the cloud drives by clicking on the Cloud Storage icon in the menu. To change the way files are saved to the Cloud drive, users can select two options in the cloud storage overview.

### Use the default account

When checked, all notes will be saved automatically to the default Cloud drive. Users will not be able to select a cloud drive.

### Use the default file name when saving

When checked, all notes will be saved to the selected cloud drive with the default file name. Users will not be able to (re)name the file.

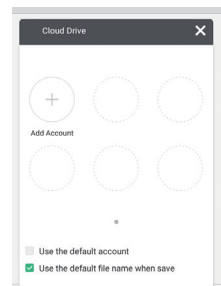



**[WPS Office]**

This is the software to use the file of the Office.

**Double click  with the touch pen.**

**[Web Browser (Browser)]**

Connect the network, and browse the web.

**Click  or  with the touch pen.**

**[Keeper]**

This is the software to clean up the running application.

**Double click  with the touch pen.**

One Key Optimize : Memory and Garbage clean

Memory Clean : Clean memory

Garbage Clean : Clean storage

**[Cloud Drive]**

Connect the network, and the Cloud Drive.

**Click  with the touch pen.**

**[ScreenLock]**

Lock/unlock touch menu.

**Click  with the touch pen.**

A screen for entering password appears. Enter the preset 4-digit password.

**[ScreenShare Pro] - 30 day trial version -**

(Activation code is included in optional iiyama WiFi Module OWM001/SI01)

Share your screen (iPhone/Android/Windows/iMac) on the display.

**Double click  with the touch pen.**

## SCREEN ADJUSTMENTS

Adjust the image by following the procedure below to get the desired picture when selecting Analog input.

- The screen adjustments described in this manual are designed to set image position and minimize flicker or blur for the particular computer in use.
- The monitor is designed to provide the best performance at resolution of 3840 × 2160, but can not provide the best at resolutions of less than 3840 × 2160 because the picture is automatically stretched to fit the full screen. It is recommended to operate at resolution of 3840 × 2160 in normal use.
- Displayed text or lines will be blurred or irregular in thickness when the picture is stretched due to the screen enlargement process.
- It is preferable to adjust the image position and frequency with the monitor controls, rather than the computer software or utilities.
- Perform adjustments after a warm-up period of at least thirty minutes.
- Additional adjustments may be required after the Auto Adjust depending on the resolution or signal timing.
- The Auto Adjust may not work correctly when displaying the picture other than the screen adjustment pattern. In this case, manual adjustments are required.

There are two ways to adjust the screen. One way is automatic adjustment for Position, Clock Frequency and Phase. The other way is performing each adjustment manually.


Perform the Auto Adjust first when the monitor is connected to a new computer, or resolution is changed. If the screen has a flicker or blur, or the picture does not fit in the display area after performing the Auto Adjust, manual adjustments are required. Both adjustments should be made by using the screen adjustment pattern (Test.bmp) obtained via the IYAMA web site (<http://www.iiyama.com>).

Adjust the image by following the procedure below to get the desired picture.  
This manual explains adjustment under Windows OS.


- ① **Display the picture at the optimum resolution.**
- ② **Enter the Test.bmp (screen adjustment pattern) to wallpaper.**

- NOTE**
- Consult the appropriate documentation for doing this.
  - Test.bmp is made at resolution of 1280 × 1024. Set the display position to center in the wallpaper setting dialogue box. If you use Microsoft® PLUS! 95/98 cancel the setting of “Stretch desktop wallpaper to fit the screen”.


[Adjustment pattern]

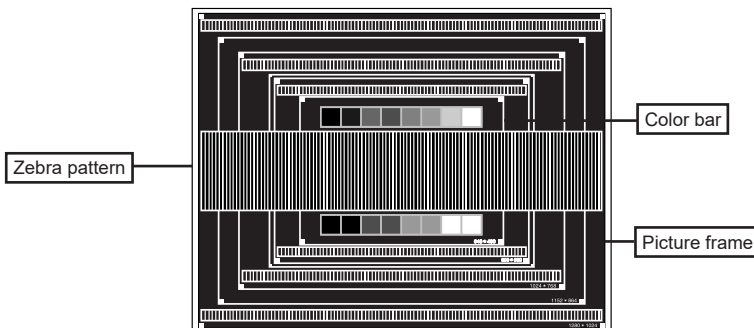


- ③ Adjust the Auto Adjustment.
- ④ Adjust the image manually by following procedure below when the screen has a flicker or blur, or the picture does not fit in the display area after performing the Auto Adjust.
- ⑤ Adjust the V-Position so that the top and bottom of the picture frame will fit to the display area.

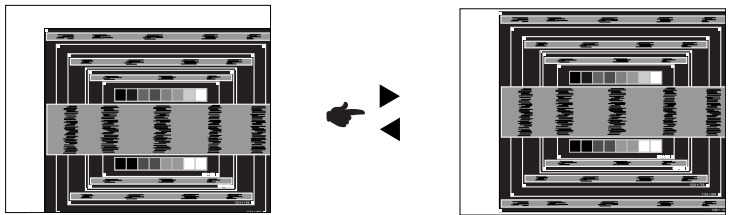

- ⑥ 1) Adjust the H-Position so that the left side of the picture frame will move to the left edge of the display area.

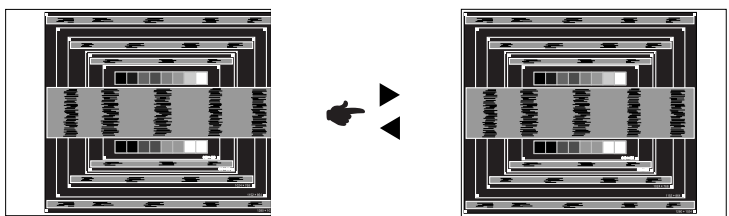


- 2) Stretch the right side of the picture frame to the right edge of the display area by adjusting the Clock Frequency.

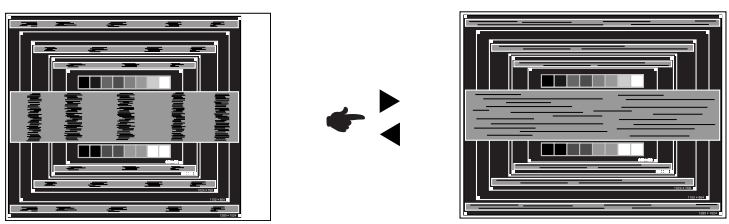

- NOTE**
- When the left side of the picture frame moves apart from the left edge of the display area during the Clock Frequency adjustment, adjust steps 1) and 2).
  - Another way to make the Clock Frequency adjustment is to correct the vertical wavy lines in the zebra pattern.
  - The picture may flicker during the Clock Frequency, H/V-Position adjustment.
  - In case the picture frame is bigger or smaller than the data display area after the Clock Frequency adjustment, repeat steps from ③.

- ⑦ **Adjust the Phase to correct horizontal wavy noise, flicker or blur in the zebra pattern.**

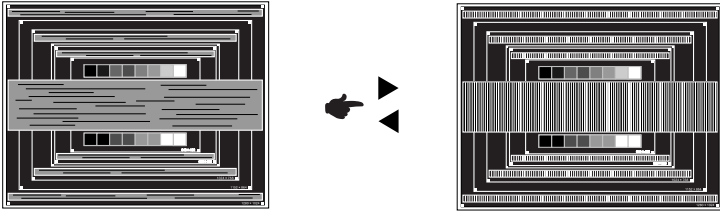

**NOTE**

- In case the strong flicker or blurs remain on a part of the screen, repeat steps ⑥ and ⑦ because the Clock Frequency may not be adjusted correctly. If the flicker or blurs still remain, set the refresh rate of computer to low (60Hz) and repeat steps from ③ again.
- Adjust the H-Position after the Phase adjustment if the horizontal position moves during the adjustment.

- ⑧ **Adjust the Brightness and Color to get the desired picture after you complete the Clock Frequency and Phase adjustments.**

**Put back your favorite wallpaper.**


## POWER MANAGEMENT FEATURE

The power management feature of this product complies with power saving requirement of VESA DPMS. When activated, it automatically reduces unnecessary power consumption of the monitor when your computer is not in use.

To use the feature, the monitor needs to be connected to a VESA DPMS compliant computer. There is a power management step the monitor takes as described below. The power management function, including any timer settings is configured by the operating system. Check your operating system manual for information on how this can be configured.

### ■ Power Management Mode

When the H-sync signal / V-sync signal / H and V sync signals from the computer are off, the monitor enters into Power Management Mode which reduces the power consumption to less than 0.5W. The screen becomes dark, and the power indicator turns to red. From Power Management Mode, the image reappears in several seconds when either the keyboard or the mouse are touched again.

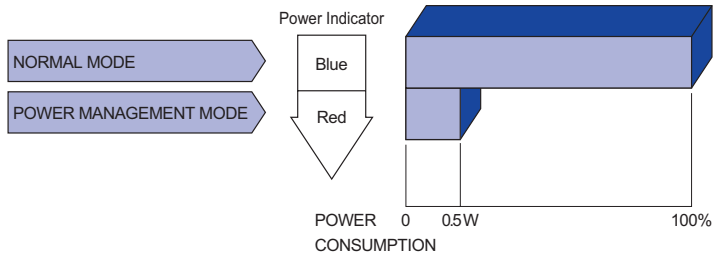

### NOTE

- Even when using the power management mode, the monitor consumes electricity. Turn off the Power Switch whenever the monitor is not in use, during the night and weekends, to avoid unnecessary power consumption.
- It is possible that the video signal from the computer may be on while the H or V sync signal is missing. In this instance, the POWER MANAGEMENT feature may not work properly.

# TROUBLE SHOOTING

If the monitor fails to operate correctly, please follow the steps below for a possible solution.

1. Perform the adjustments described in OPERATING THE MONITOR, depending on the problem you have. If the monitor does not get a picture, skip to 2.
2. Consult the following items if you cannot find an appropriate adjustment item in OPERATING THE MONITOR or if the problem persists.
3. If you are experiencing a problem which is not described below or you cannot correct the problem, discontinue using the monitor and contact your dealer or iiyama service center for further assistance.

## Problem

## Check

- |   |  |
|---|--|
| <p>① The picture does not appear.<br/>(Power indicator does not light up.)<br/><br/>(Power indicator is blue.)<br/><br/>(Power indicator is red.)</p> | <p><input type="checkbox"/> The Power Cable is firmly seated in the socket.<br/><input type="checkbox"/> The Power Switch is turned ON.<br/><input type="checkbox"/> The AC socket is live. Please check with another piece of equipment.<br/><br/><input type="checkbox"/> If the blank screen saver is in active mode, touch the keyboard or the mouse.<br/><input type="checkbox"/> Increase the Contrast and/or Brightness.<br/><input type="checkbox"/> The computer is ON.<br/><input type="checkbox"/> The Signal Cable is properly connected.<br/><input type="checkbox"/> The signal timing of the computer is within the specification of the display.<br/><br/><input type="checkbox"/> If the display is in power management mode, touch the keyboard or the mouse.<br/><input type="checkbox"/> The computer is ON.<br/><input type="checkbox"/> The Signal Cable is properly connected.<br/><input type="checkbox"/> The signal timing of the computer is within the specification of the display.</p> |
| <p>② The screen is not synchronized.</p>  | <p><input type="checkbox"/> The Signal Cable is properly connected.<br/><input type="checkbox"/> The signal timing of the computer is within the specification of the monitor.<br/><input type="checkbox"/> The video output level of the computer is within the specification of the monitor.</p>   |
| <p>③ The screen position is not in the center.</p>  | <p><input type="checkbox"/> The signal timing of the computer is within the specification of the monitor.</p>  |
| <p>④ The screen is too bright or too dark.</p>  | <p><input type="checkbox"/> The video output level of the computer is within the specification of the monitor.</p>   |
| <p>⑤ The screen is shaking.</p>   | <p><input type="checkbox"/> The power voltage is within the specification of the monitor.<br/><input type="checkbox"/> The signal timing of the computer is within the specification of the monitor.</p>   |
| <p>⑥ No sound.</p>  | <p><input type="checkbox"/> The audio equipment (computer etc.) is ON.<br/><input type="checkbox"/> The Audio Cable is properly connected.<br/><input type="checkbox"/> The Volume is turned up.<br/><input type="checkbox"/> The Mute is OFF.<br/><input type="checkbox"/> The audio output level of the audio equipment is within the specification of the monitor.</p>  |
| <p>⑦ The sound is too loud or too quiet.</p>  | <p><input type="checkbox"/> The audio output level of the audio equipment is within the specification of the monitor.</p>  |
| <p>⑧ A strange noise is heard.</p>  | <p><input type="checkbox"/> The Audio Cable is properly connected.</p>   |

### Problem

### Check

- |  |   |
|--|---|
| ⑨ The touch screen shows no response.  | <input type="checkbox"/> The USB Cable is firmly seated in the socket.<br><input type="checkbox"/> Touch screen driver software is installed. |
| ⑩ The touch position does not deviate. | <input type="checkbox"/> The calibration function set up correctly.   |

## RECYCLING INFORMATION

For better environment protection please don't dispose your monitor.  
Please visit our web site: [www.iiyama.com/recycle](http://www.iiyama.com/recycle) for monitor recycling.

# APPENDIX

Design and specifications are subject to change without prior notice.

## SPECIFICATIONS : ProLite TE8668MIS-B1AG

ENGLISH


Touch Screen	Technology	IR Touch 20points
	Light transmission	88%
	Hardness	7H
	Thickness	4mm
	Communication system	USB serial transfer
	Response time	20ms
Size Category		86"
LCD Panel	Panel technology	IPS
	Size	Diagonal: 85.6" (217.4cm)
	Pixel pitch	0.4935mm H × 0.4935mm V
	Brightness	375cd/m <sup>2</sup> (Typical: without glass), 330cd/m <sup>2</sup> (Typical: with glass)
	Contrast ratio	1200 : 1 (Typical: without glass)
	Viewable angle	Horizontal : 178 degrees, Vertical: 178 degrees (Typical)
	Response time	8ms (Typical, Gray to Gray)
Display Colors		Approx.1.07B
Sync Frequency		VGA: Horizontal: 30.0-80.0kHz, Vertical: 24-30, 55-75Hz HDMI1: Horizontal: 30.0-135.0kHz, Vertical: 24-30, 55-75Hz HDMI2/HDMI3: Horizontal: 30.0-80.0kHz, Vertical: 24-30, 55-75Hz DisplayPort: Horizontal: 30.0-90.0kHz, Vertical: 24-30, 55-75Hz
Native Resolution		3840 × 2160, 8.3 MegaPixels
Supported max. resolution		VGA: 1920 × 1080 60Hz HDMI1: 3840 × 2160 60Hz (YUV420) HDMI2/HDMI3: 3840 × 2160 30Hz DisplayPort: 3840 × 2160 30Hz, 2560 × 1440 60Hz
Input Connector		VGA ×1, HDMI ×3, DisplayPort ×1
USB Standard		USB2.0 ×2, USB3.0 ×1
Number of USB Ports		1 Upstream : Series B (for touch)
Connector shape		3 Downstream : Series A
Input AV Connector		Mini jack
Input Audio Connector		Mini jack
LAN		RJ45
Serial Port		RS-232C In
Plug & Play		VESA DDC2B™
Input Sync Signal		Separate sync: TTL, Positive or Negative
Input Video Signal		Analog: 0.7Vp-p (Standard), 75Ω, Positive Digital: HDMI, DisplayPort
Input Audio Signal		0.5Vrms maximum
Output Connector		HDMI
SPDIF out Connector		SPDIF
Headphone Connector		Mini jack



Speakers	Internal: 2 Typical: 12W, Maximum: 16W (Stereo speakers)
iiWare Version	V5.1
Maximum Screen Size	1895.04mm W × 1065.96mm H / 74.6" W × 42.0" H
Power Source	100-240VAC, 50/60Hz, 4A
Power Consumption*	410W typical, Power management mode: 0.5W maximum Energy Efficiency Class: C
Dimensions / Net Weight	1988.5 × 1161.0 × 100.5mm / 78.3 × 45.7 × 3.9" (W×H×D) 76.0kg / 167.5lbs
Environmental Considerations	Operating: Temperature 0 to 40°C / 32 to 104°F Humidity 85% (No condensation) Storage: Temperature -20 to 60°C / 4 to 140°F Humidity 85% (No condensation)
Approvals	CB, CE, CU, TÜV-Bauart

**NOTE** \* USB peripherals / Audio equipment are not connected.

**DIMENSIONS**

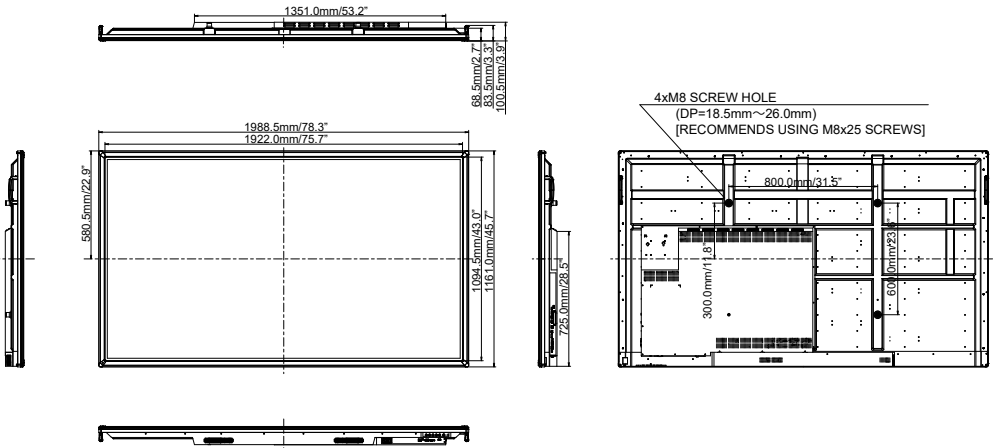

# COMPLIANT TIMING

ENGLISH

Timing		fH(kHz)	fV(Hz)	Dot clock (MHz)	VGA	HDMI1	HDMI2	HDMI3	DisplayPort	AV	
VESA	VGA 640x480	31.5	60.0	25.175	○	○	○	○	○		
	SVGA 800x600	37.9	60.0	40.000	○	○	○	○	○		
	XGA 1024x768	48.4	60.0	65.000	○	○	○	○	○		
	WXGA 1280x768	47.8	60.0	79.500	○	○	○	○	○		
	QVGA 1280x960	60.0	60.0	108.000	○	○	○	○	○		
	SXGA 1280x1024	64.0	60.0	108.000	○	○	○	○	○		
	HD FWXGA 1366x768	47.7	60.0	85.500	○	○	○	○	○		
	CVT 1400x900	55.9	60.0	106.500	○	○	○	○	○		
	WSXGA 1680x1050	65.3	60.0	146.250	○	○	○	○	○		
	FHD 1920x1080	67.5	60.0	148.500	○	○	○	○	○		
4K 3840x2160		67.5	30.0	297.000		○			○		
		112.5	50.0	594.000		○					
		135.0	60.0	594.000		○					
IBM	720x400	31.5	70.0	28.320	○	○	○	○			
SD	NTSC-M	15.7	60.0	13.500						○	
	NTSC-J	15.7	60.0	13.500						○	
	PAL-BDGH	15.7	60.0	13.500						○	
	480i 60Hz	15.7	60.0	13.500		○	○	○	○		
	576i 50Hz	15.6	50.0	13.500		○	○	○	○		
	480p 60Hz	31.5	60.0	27.000		○	○	○	○		
HD	576p 50Hz	31.3	50.0	27.000		○	○	○	○		
	720p	50Hz	37.5	50.0	74.250		○	○	○	○	
		60Hz	45.0	60.0	74.250		○	○	○	○	
	1080i	50Hz	28.1	50.0	74.250		○	○	○	○	
		60Hz	33.8	60.0	74.250		○	○	○	○	
	1080p	50Hz	56.3	50.0	148.500		○	○	○	○	
60Hz		67.5	60.0	148.500		○	○	○	○		

\* ○ means supported the timing.